



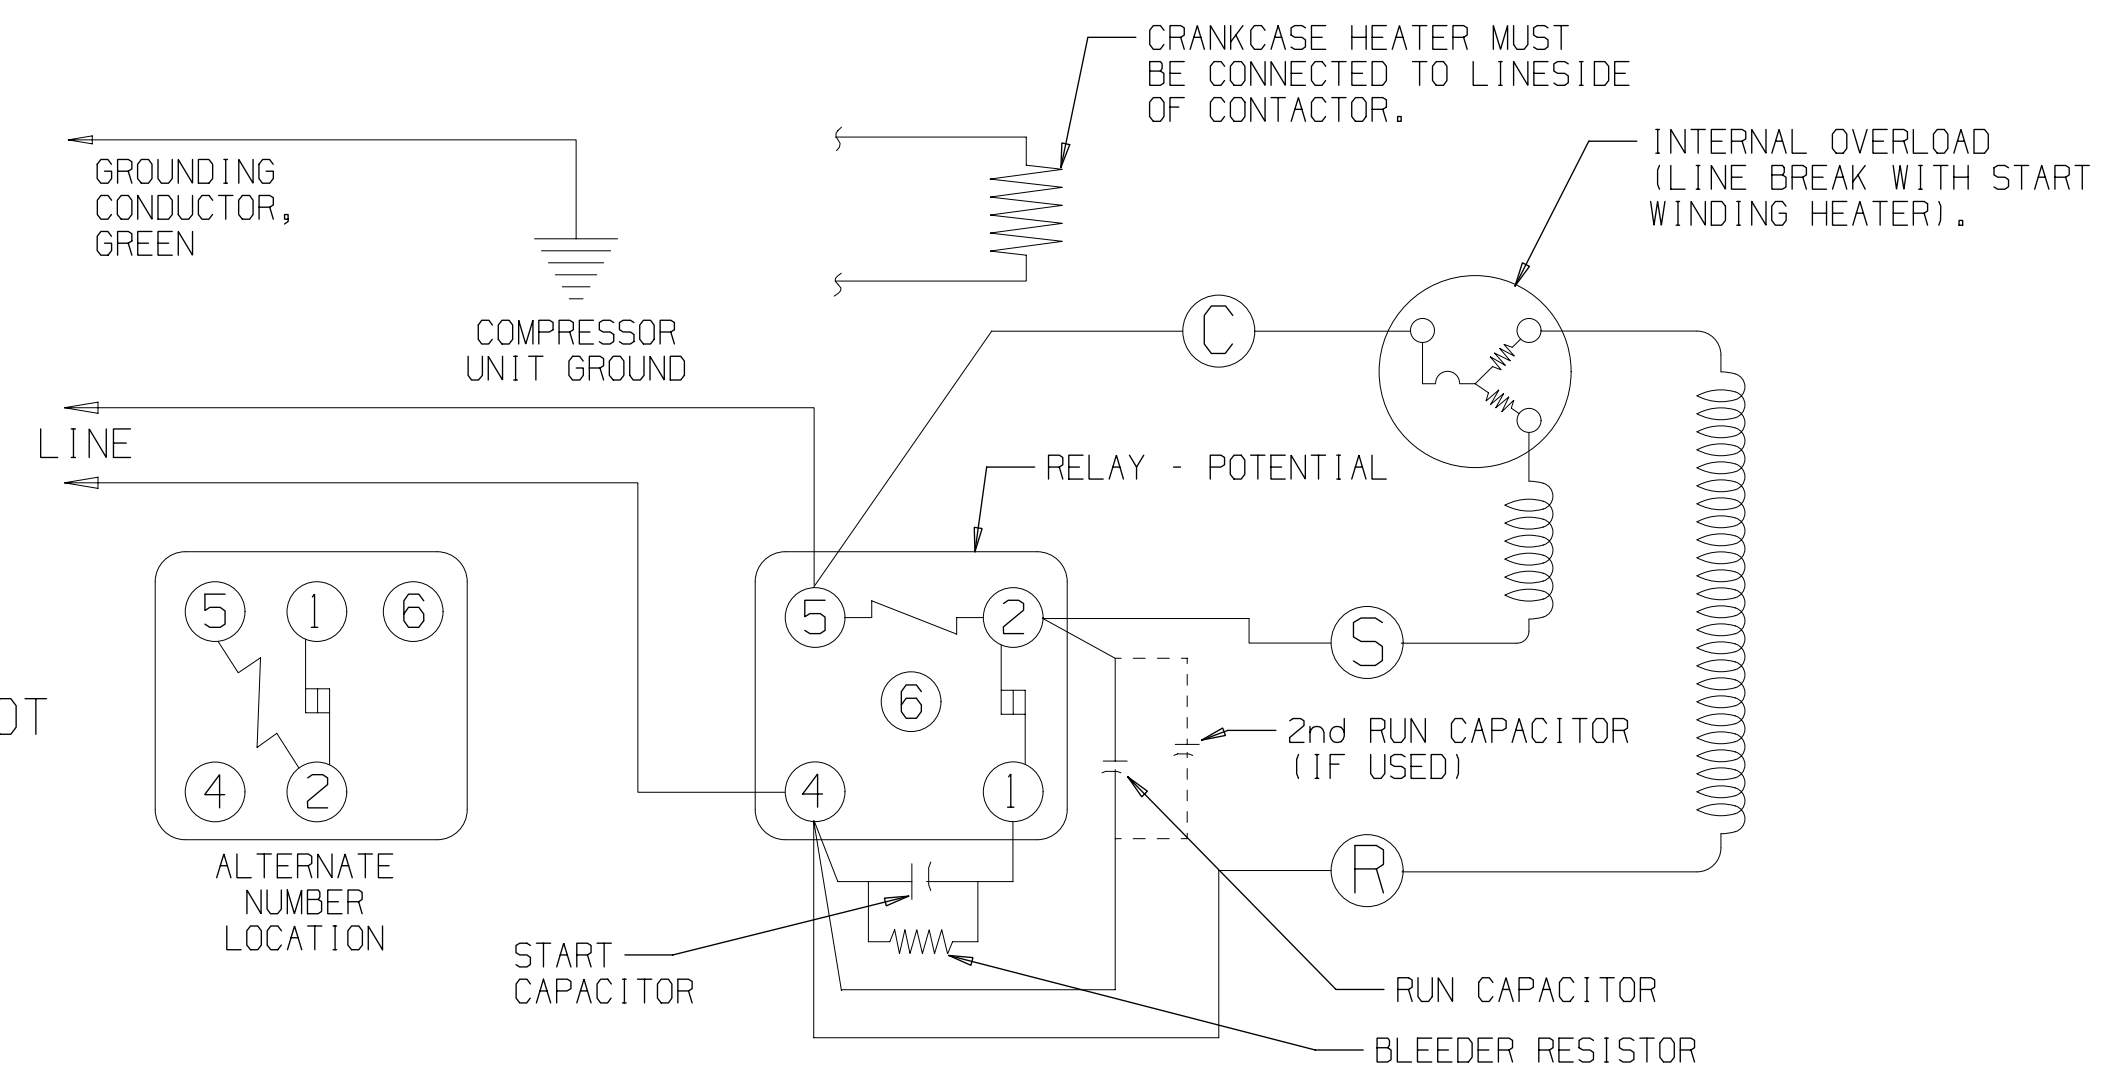

230 VOLT REF. DWG. MD472-41
SCHEMATIC WIRING DIAGRAM - CSR OR CSR START CAPACITOR ASSIST - INTERNAL
OVERLOAD (LINE BREAK) - START WINDING HEATER - CRANKCASE HEATER.

AV-230 V. -PSC-INTERNAL OVERLOAD (LINE BREAK) - START WINDING HEATER -
CRANKCASE HEATER.

AV-230 V. -CSR OR CSR START CAPACITOR ASSIST-INTERNAL OVERLOAD (LINE BREAK) -
START WINDING HEATER - CRANKCASE HEATER.

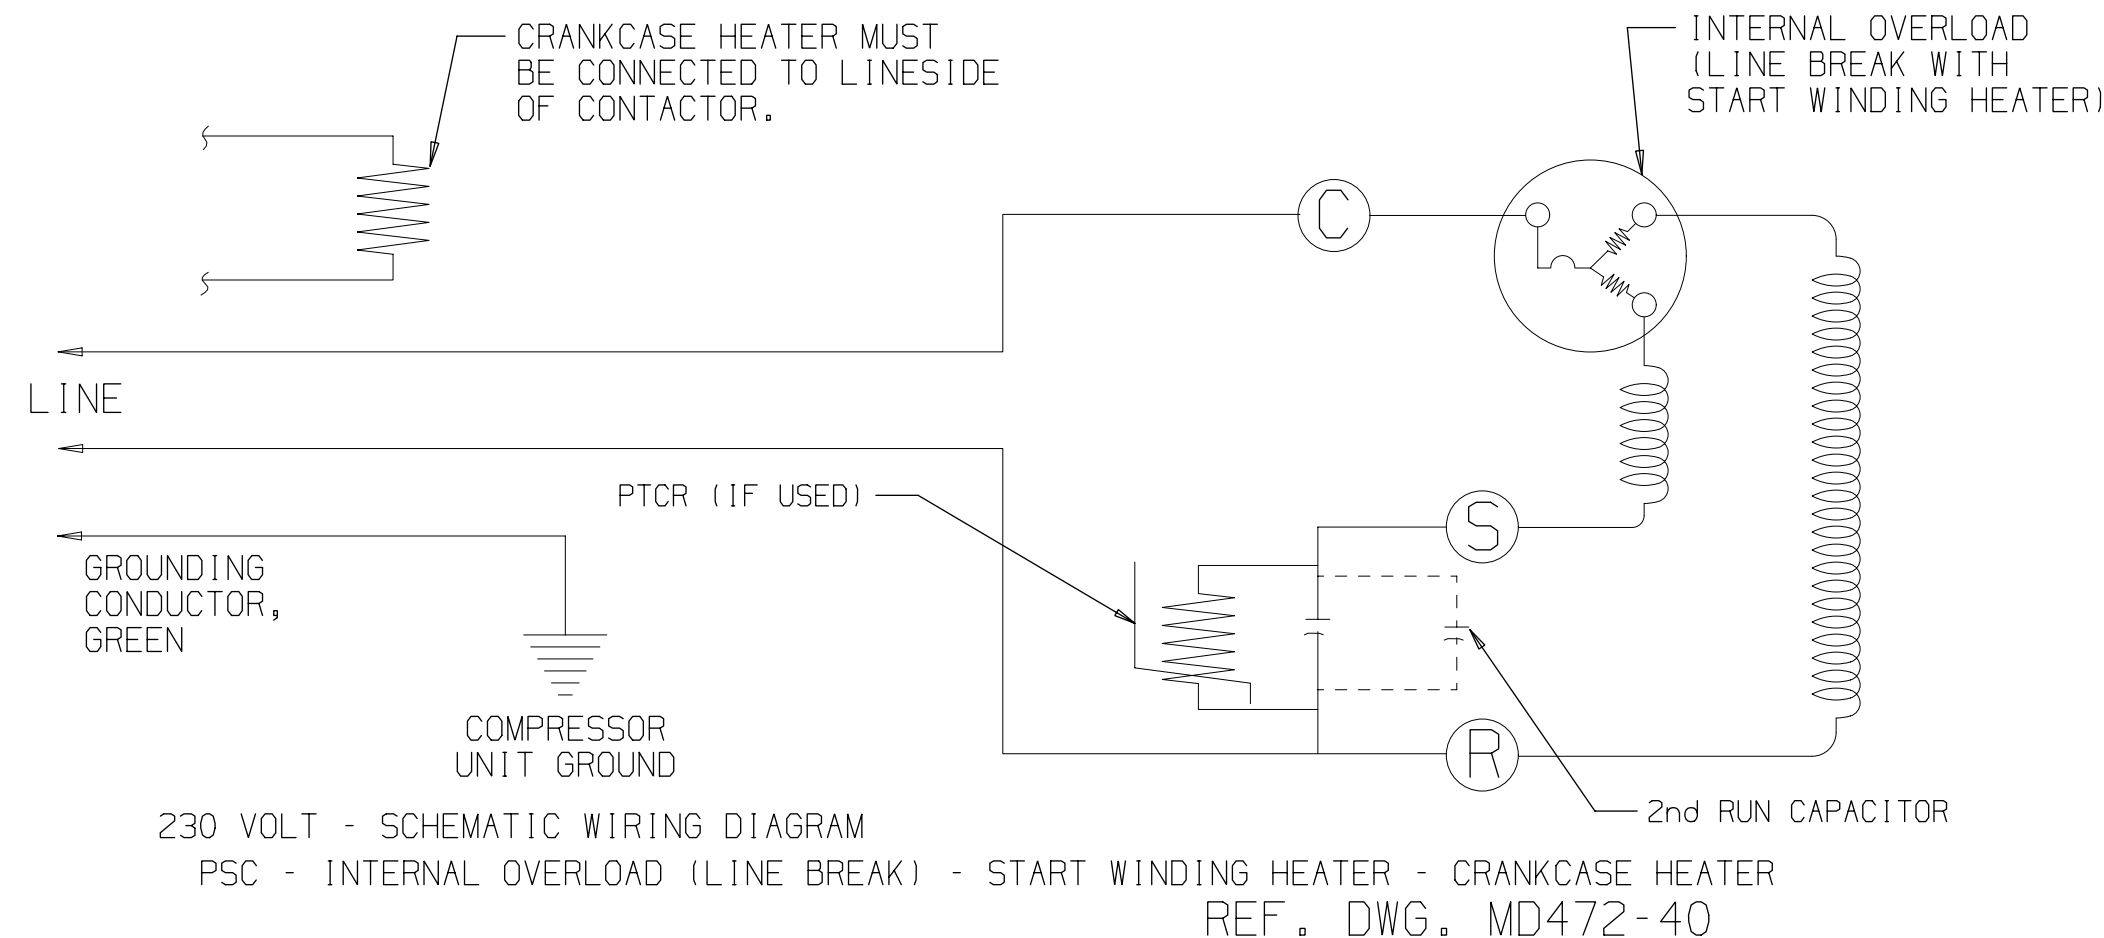

PSC SHOWN

CONNECT TO LINE —
SIDE OF CONTACTOR

- CRANKCASE HEATER

NOTE :

1. ASSEMBLE PARTS AS SHOWN IF SPECIFIED ON B/M.
2. IF TWO RUN CAPACITORS ARE REQUIRED HOOK-UP AS SHOWN.

ENGLISH	
	
Q. A. SYMBOLS	
☆	= CATEGORY I
△	= CATEGORY II
□	= CATEGORY III
	= CATEGORY IV

Ⓜ AIR CONDITIONING MODELS

AV

[illegible]