

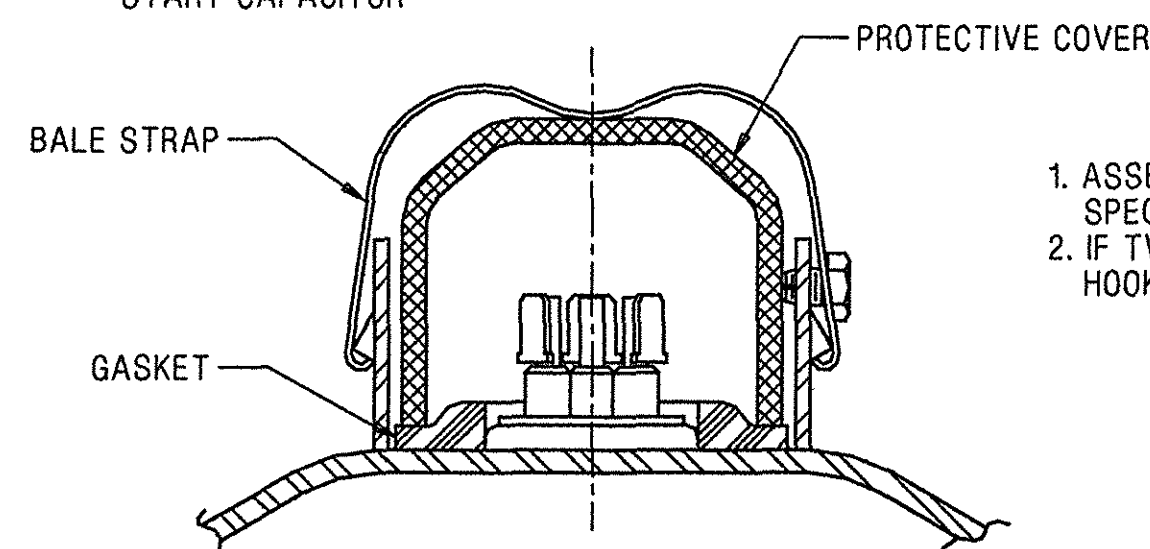


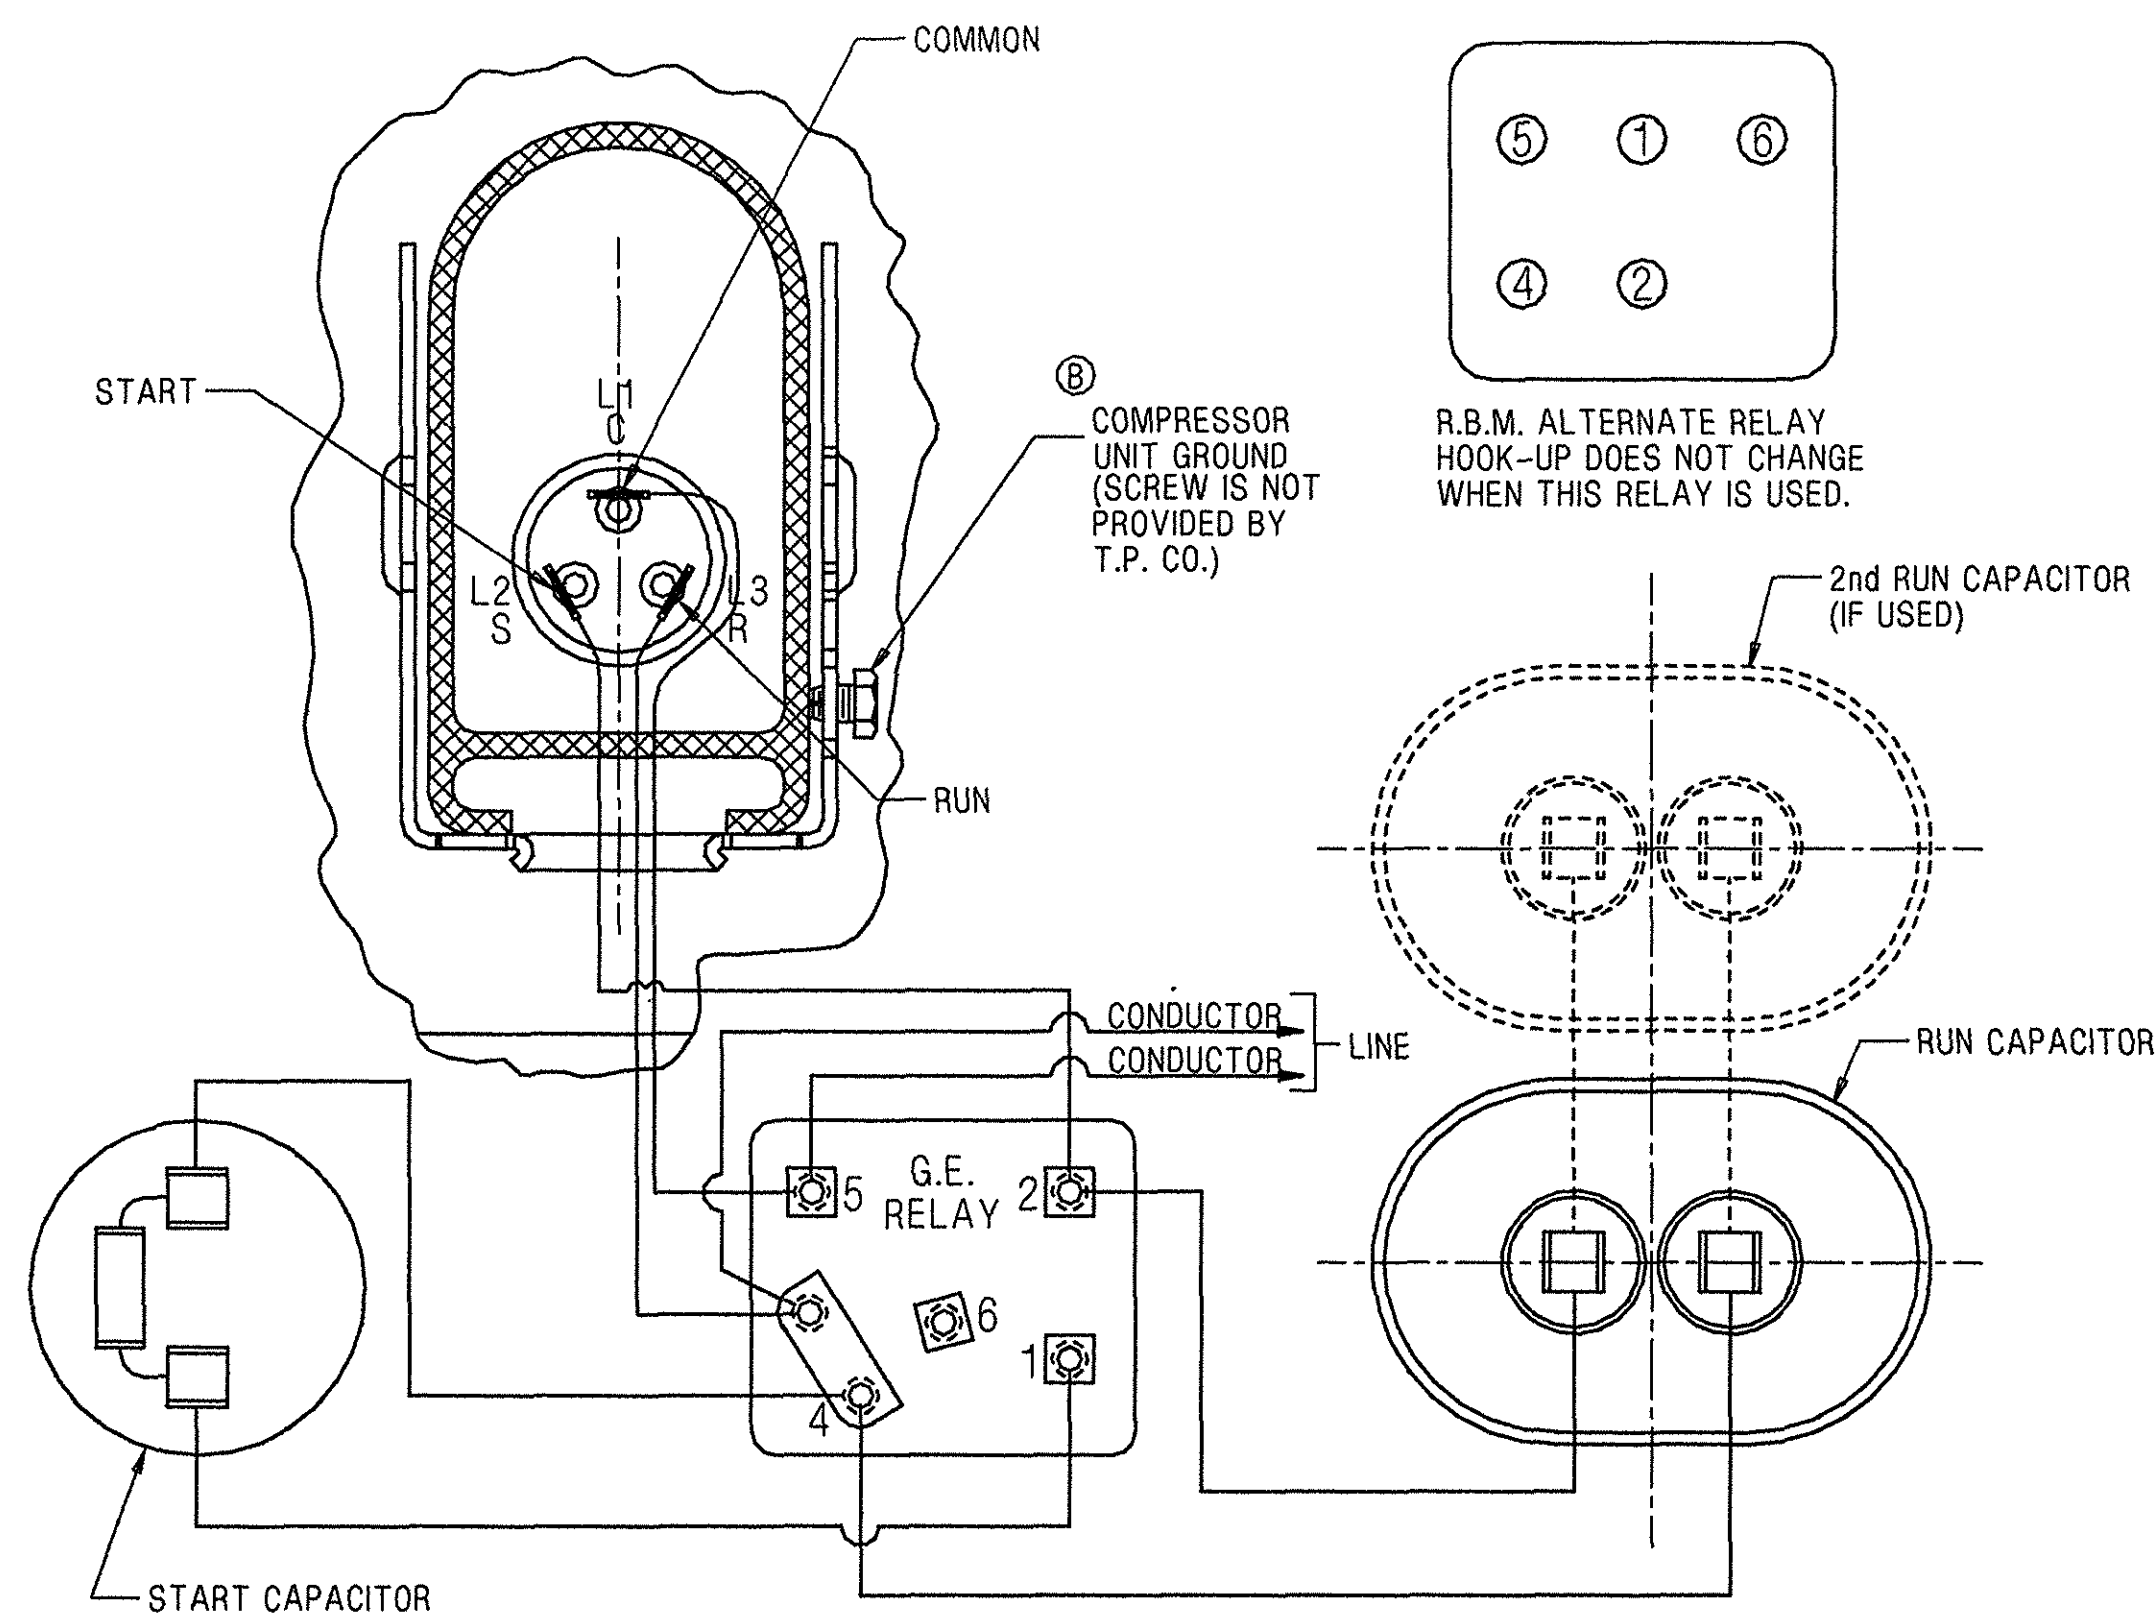


- NOTES--
1. ASSEMBLE PARTS AS SHOWN IF SPECIFIED ON B/M.
 2. IF TWO RUN CAPACITORS ARE REQUIRED HOOKUP AS SHOWN.

WARNING - WIRING DIAGRAM MUST BE FOLLOWED AS SHOWN. ANY MISWIRING CAN CAUSE SERIOUS ELECTRICAL HAZARD AND POTENTIAL DAMAGE OR RUPTURE OF COMPONENT ELECTRICAL PARTS.

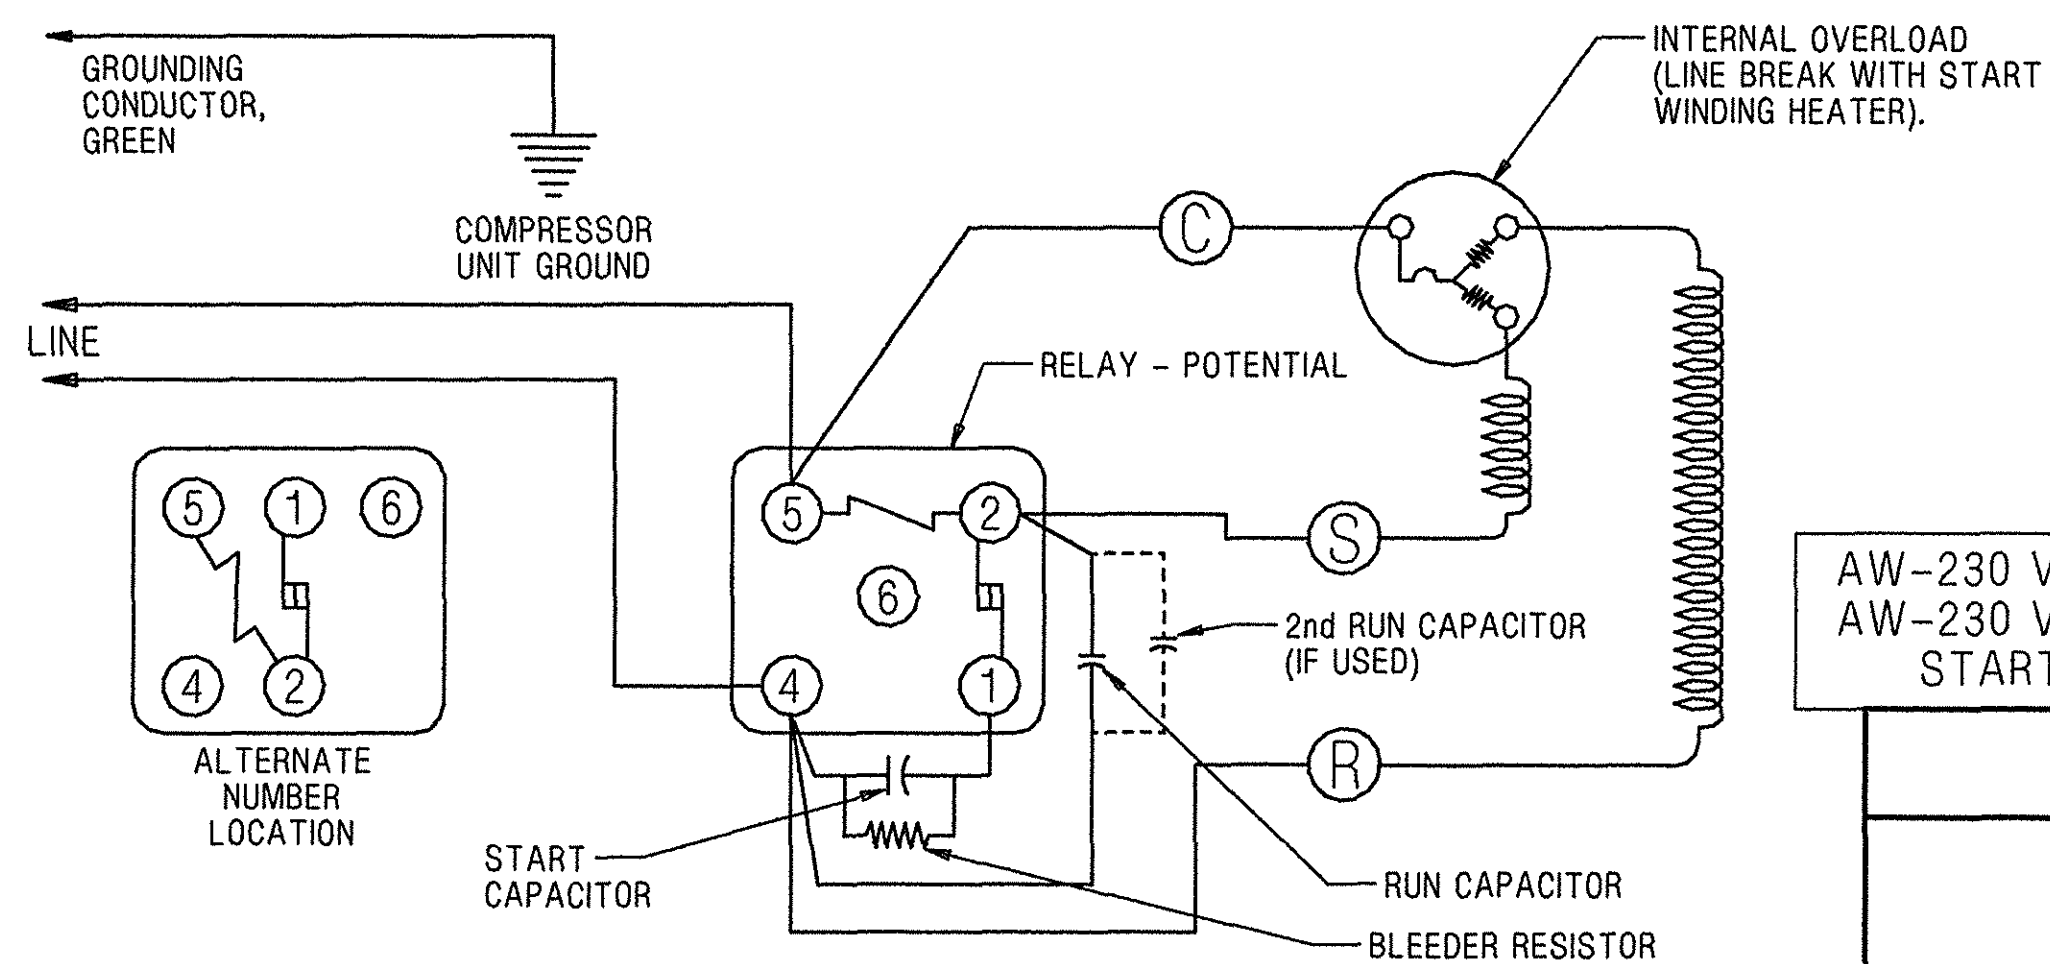


230 VOLT SCHEMATIC WIRING DIAGRAM-CSR OR CSR START CAPACITOR ASSIST
-INTERNAL OVERLOAD (LINE BREAK)-START WINDING HEATER

REF. DWG.
MD472-34

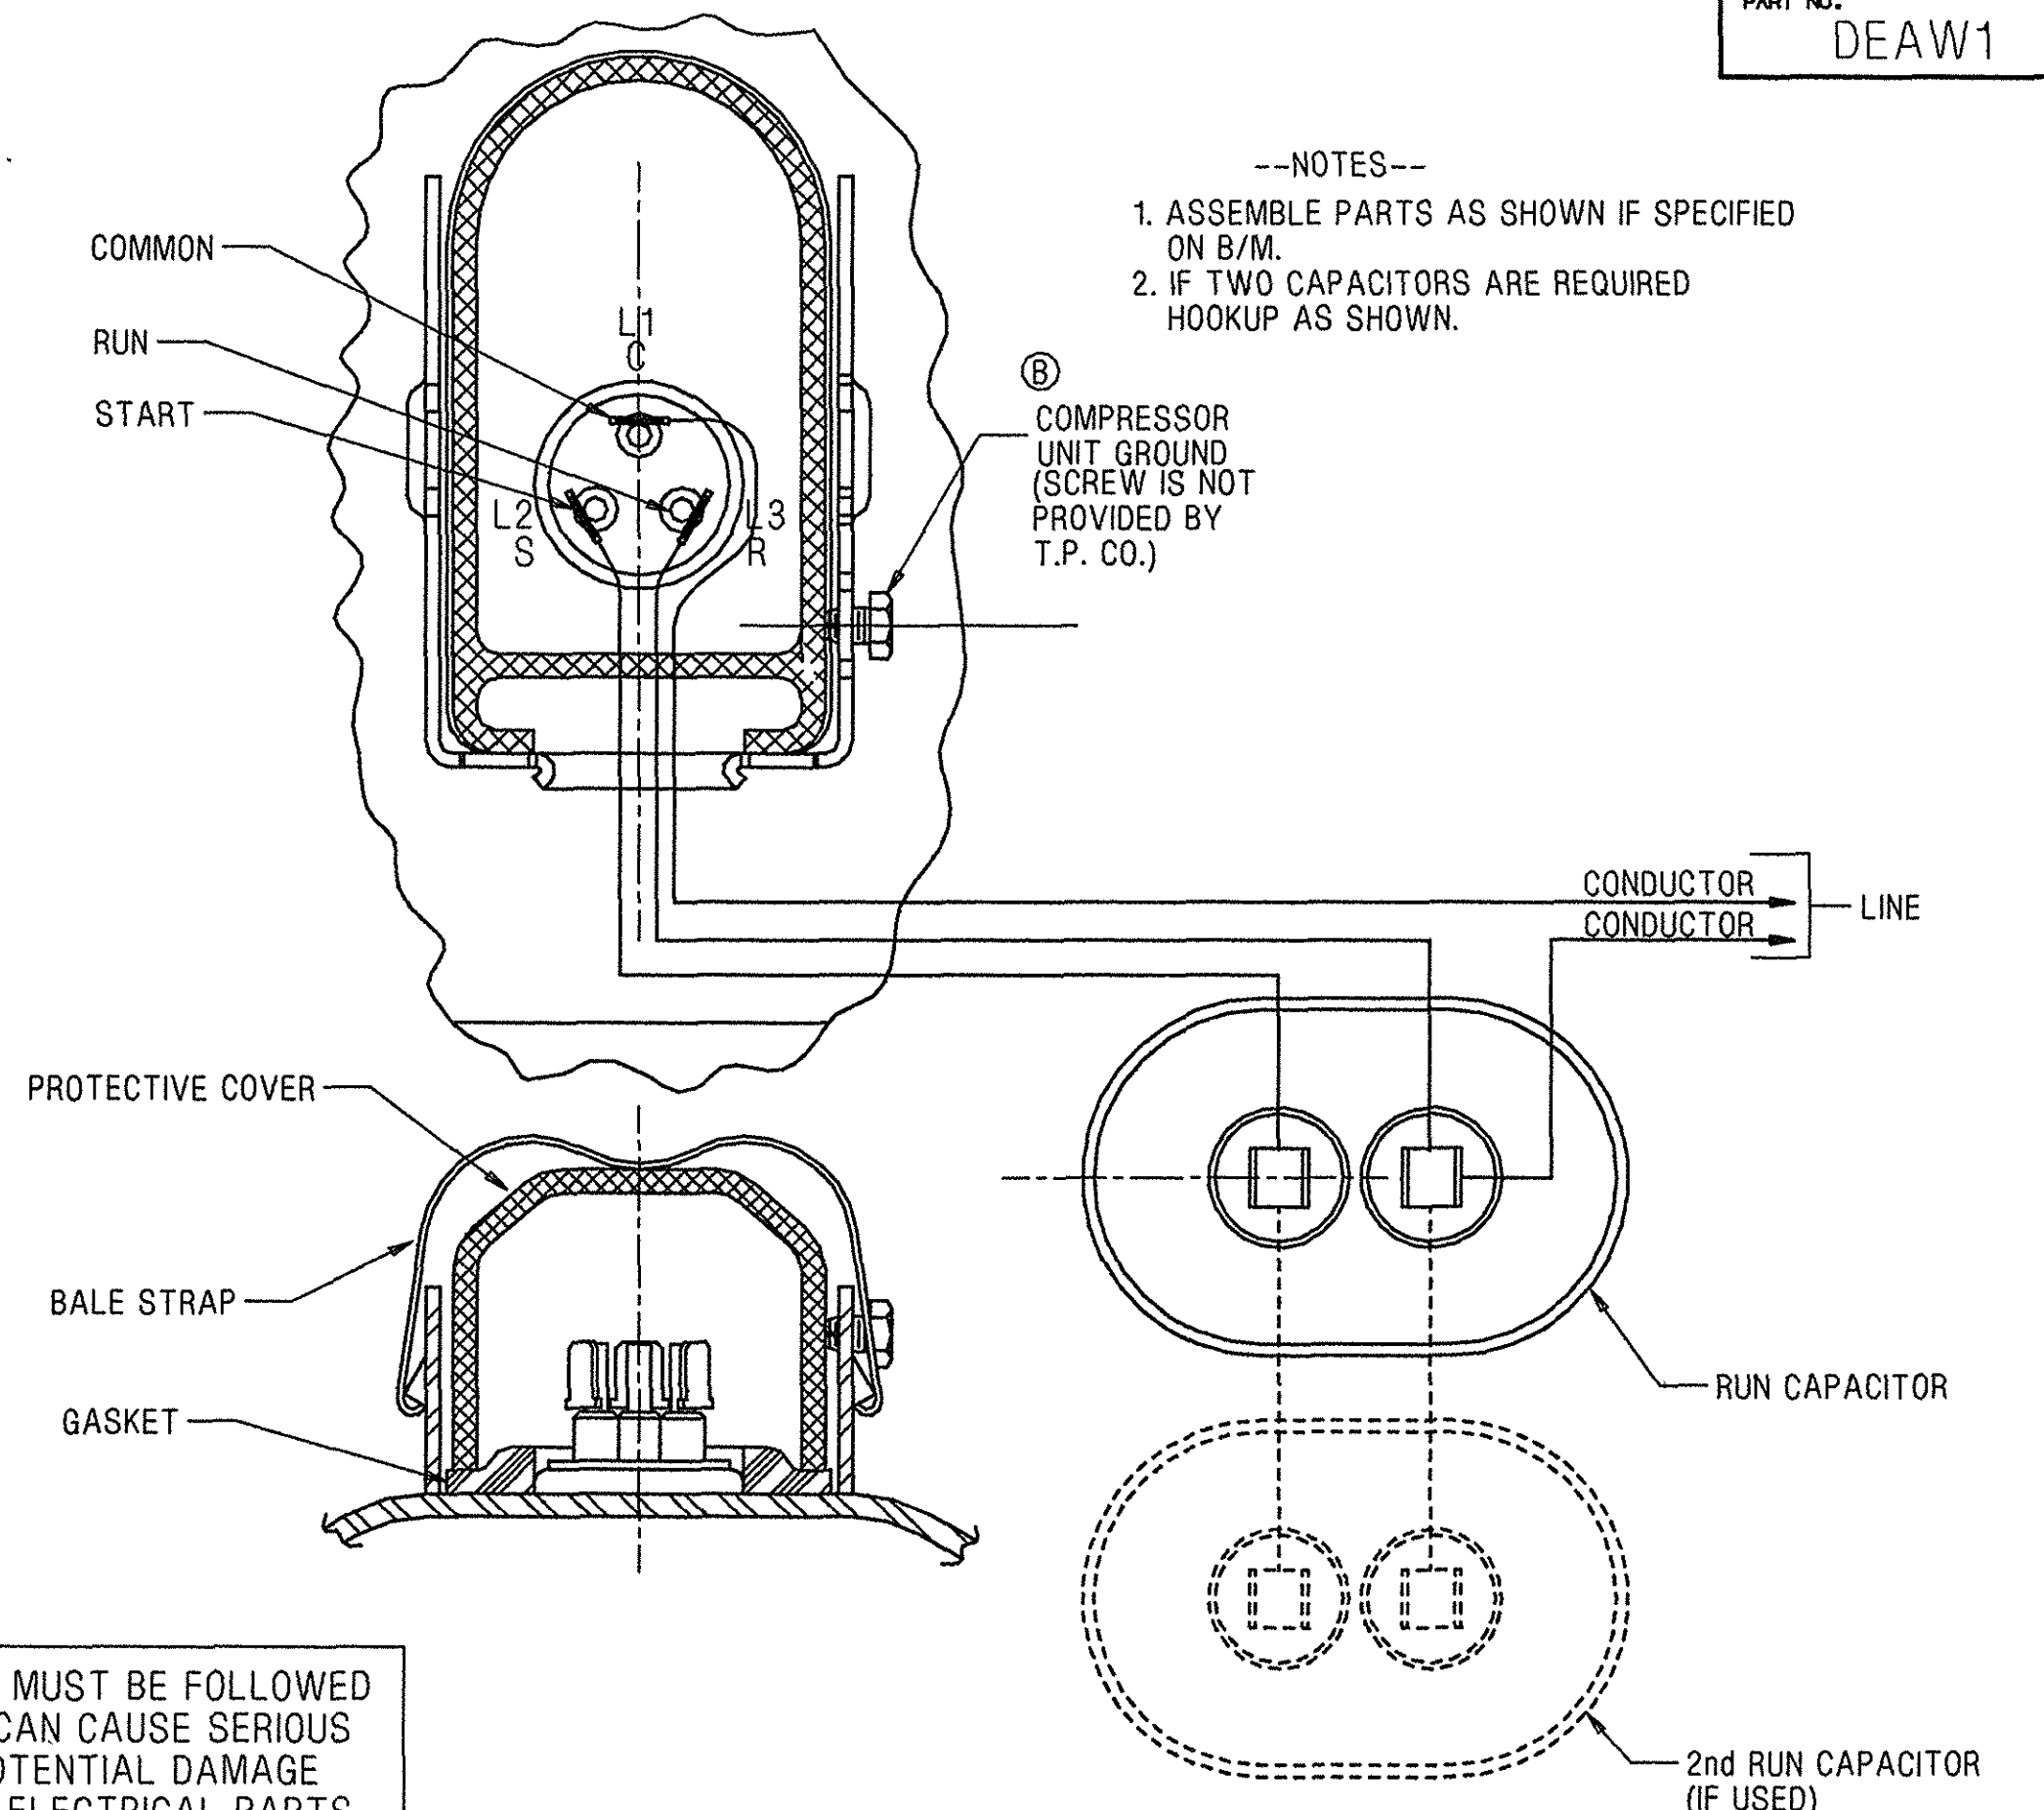

- NOTES--
1. ASSEMBLE PARTS AS SHOWN IF SPECIFIED ON B/M.
 2. IF TWO CAPACITORS ARE REQUIRED HOOKUP AS SHOWN.

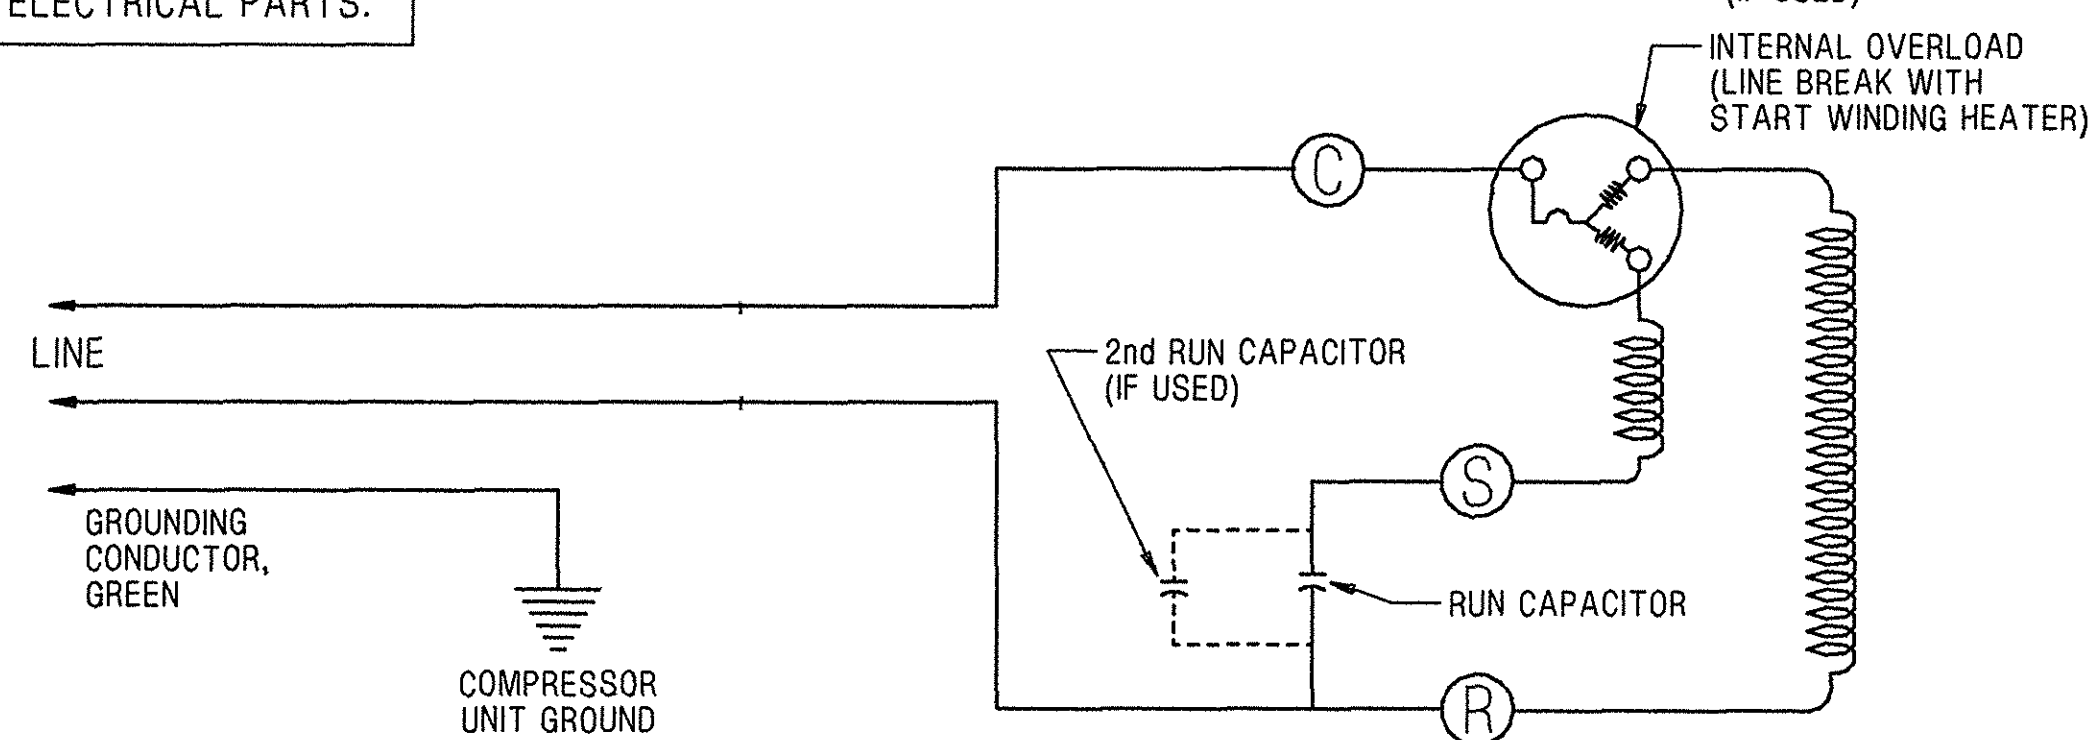

230 VOLT-SCHEMATIC WIRING
DIAGRAM-PSC-INTERNAL OVERLOAD (LINE BREAK)-START WINDING HEATER

REF. DWG.
MD472-33

AW-230 V.-PSC-INTERNAL OVERLOAD(LINE BREAK)-START WINDING HEATER
AW-230 V.-CSR OR CSR START CAPACITOR ASSIST-INTERNAL OVERLOAD (LINE BREAK)-
START WINDING HEATER

Q.A. SYMBOLS

AW

[illegible]