



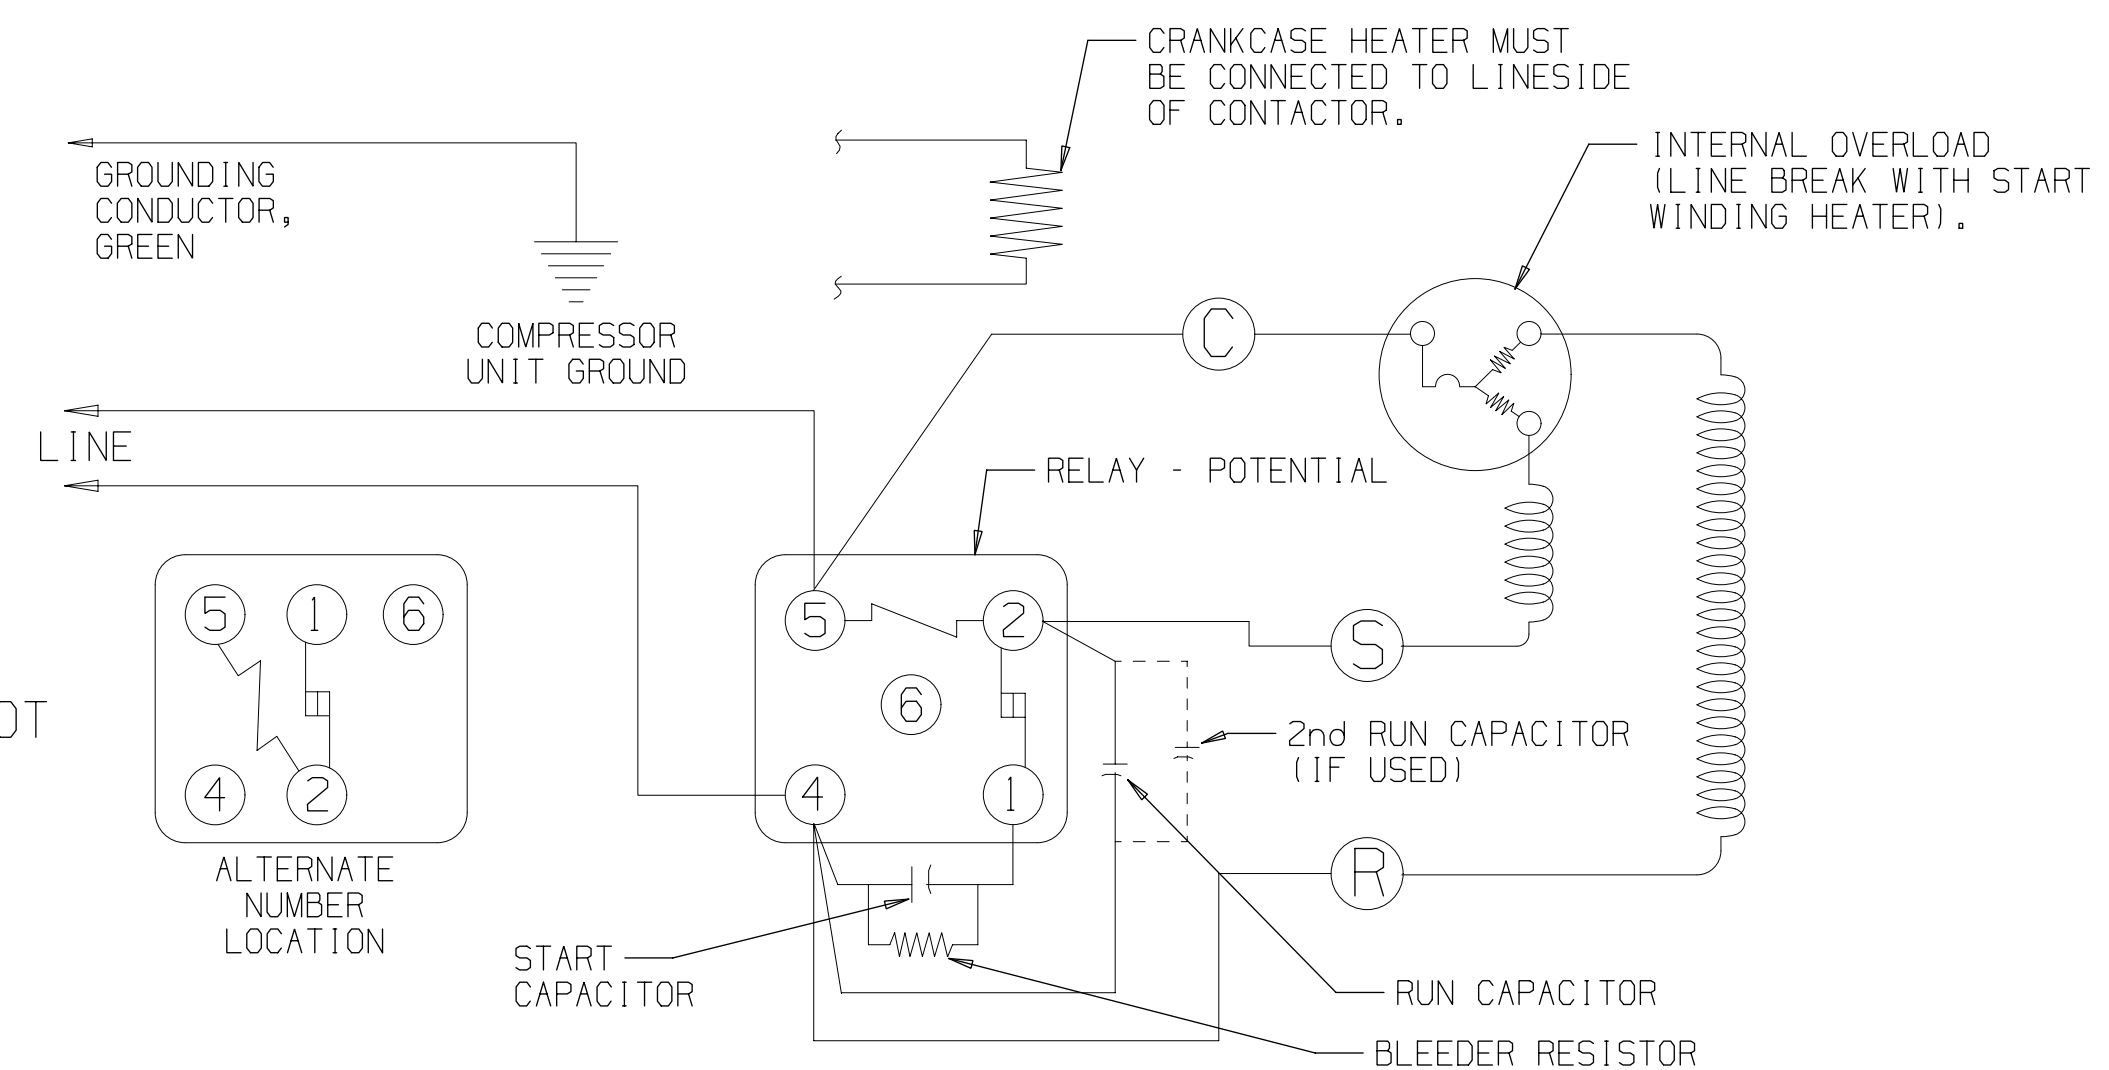

230 VOLT REF. DWG. MD472-41
SCHEMATIC WIRING DIAGRAM - CSR OR CSR START CAPACITOR ASSIST - INTERNAL
OVERLOAD (LINE BREAK) - START WINDING HEATER - CRANKCASE HEATER.

AV-230 V. -PSC- INTERNAL OVERLOAD (LINE BREAK) - START WINDING HEATER -
CRANKCASE HEATER.

AV-230 V. -CSR OR CSR START CAPACITOR ASSIST-INTERNAL OVERLOAD (LINE BREAK) -
START WINDING HEATER - CRANKCASE HEATER.

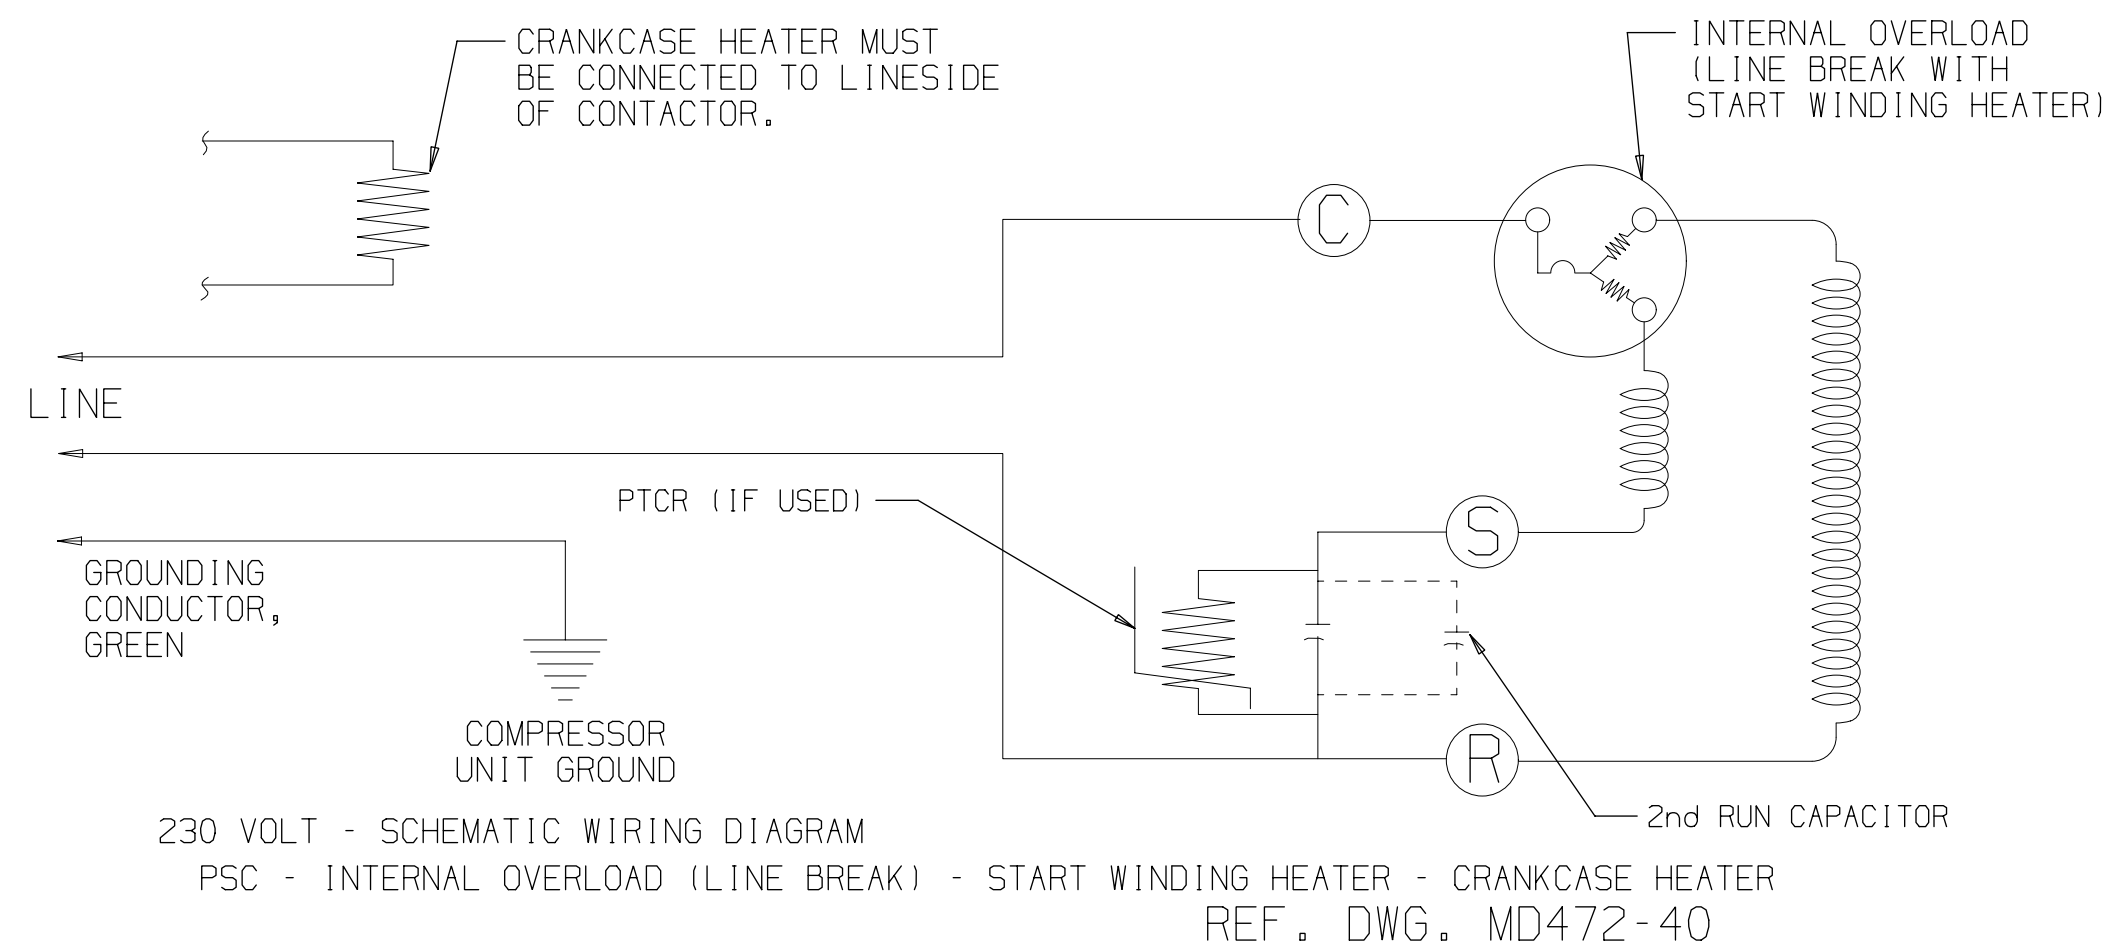

PSC SHOWN


CONNECT TO LINE —
SIDE OF CONTACTOR

- CRANKCASE HEATER

NOTE :

1. ASSEMBLE PARTS AS SHOWN IF SPECIFIED ON B/M.
2. IF TWO RUN CAPACITORS ARE REQUIRED HOOK-UP AS SHOWN.

ENGLISH



Q. A. SYMBOLS

☆ = CATEGORY 1

 $\Delta = \text{CATEGORY } 11$

 = CATEGORY 11

☐ - CATEGORY III
☐ - CATEGORY IV

Ⓜ AIR CONDITIONING MODELS

AV

ELECTRICAL HOOK-UP

LY.	DWN.	T.G.
-----	------	------

CK.

APR.	
------	--

SCALE

177 = 177

S CO.

THIS PRINT SUPERSEDES
ALL PRINTS PRIOR TO

[illegible]

	DRAWING NO.
--	-------------

DRAWING NO.

DE 11/1

DEAVI

1
