


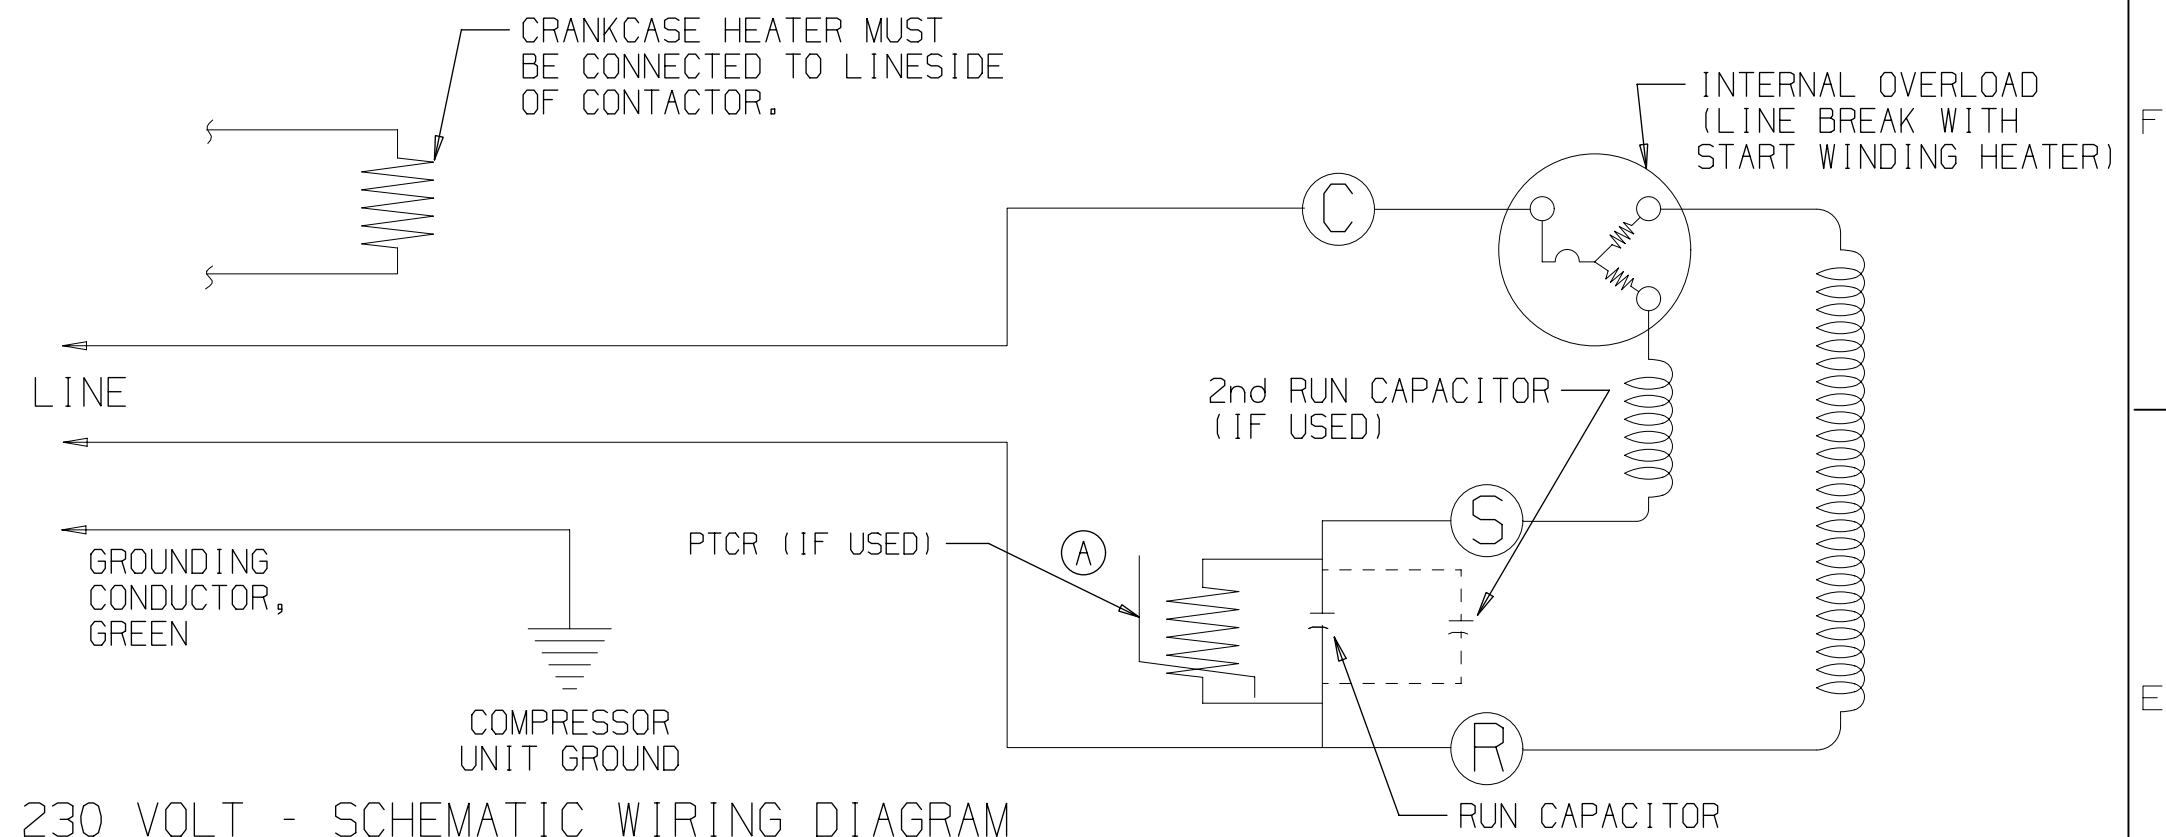


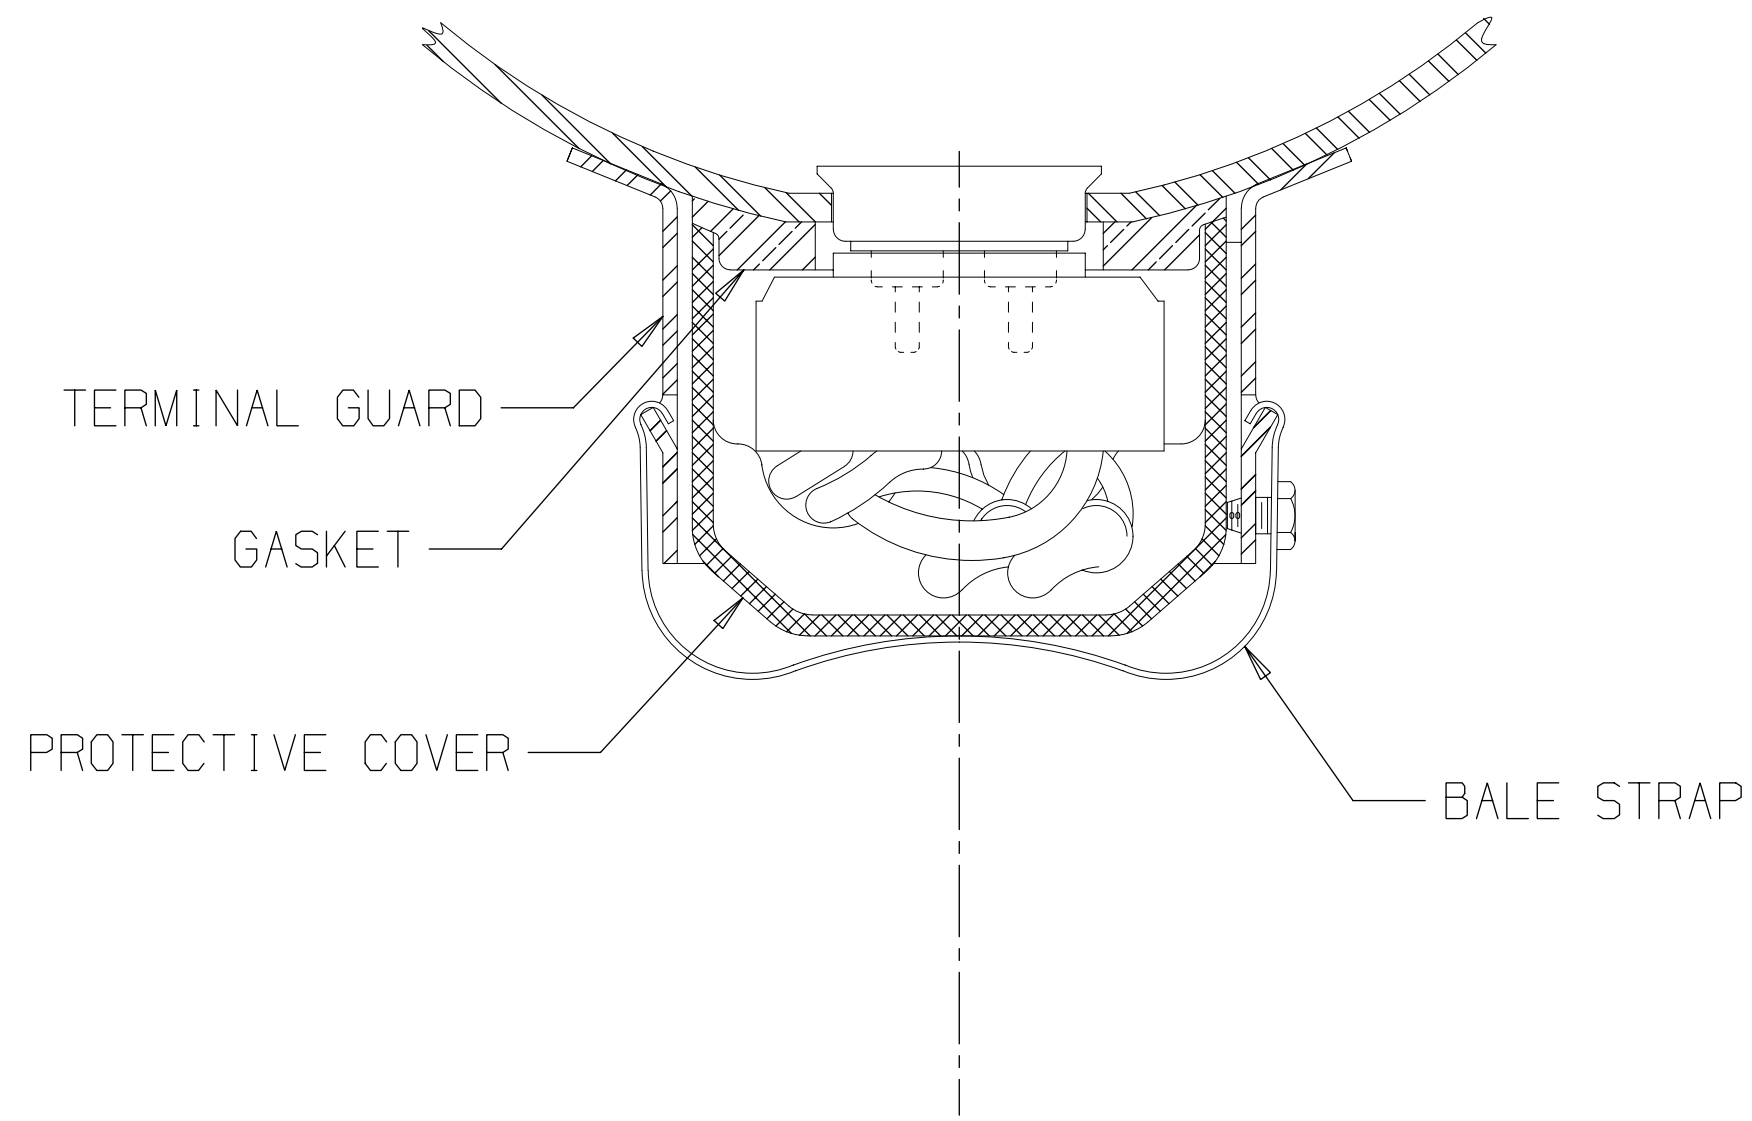

230 VOLT - SCHEMATIC WIRING DIAGRAM
PSC - INTERNAL OVERLOAD (LINE BREAK) - START WINDING HEATER - CRANKCASE HEATER
REF. DWG. MD472-40

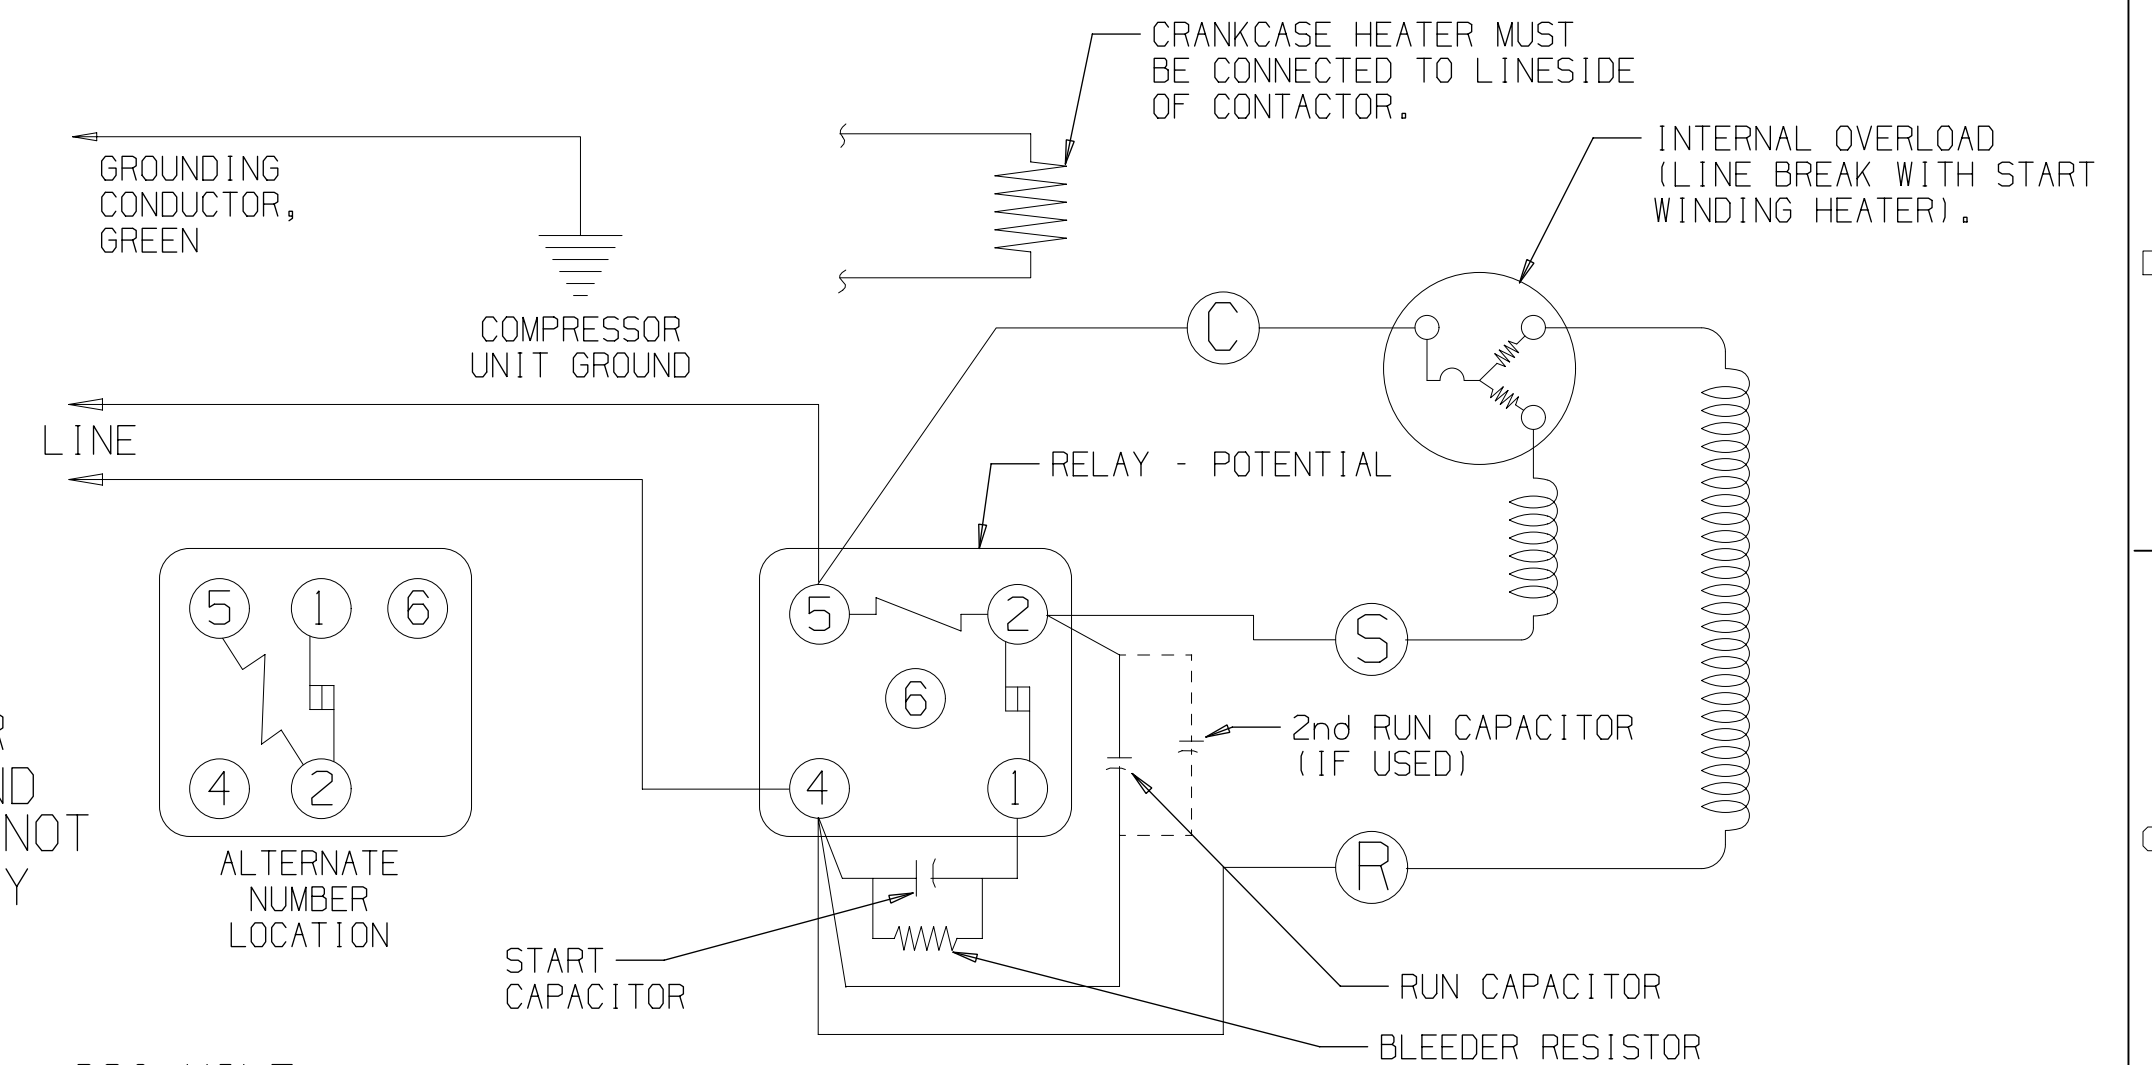

230 VOLT REF. DWG. MD472-41
SCHEMATIC WIRING DIAGRAM - CSR OR CSR START CAPACITOR ASSIST - INTERNAL
OVERLOAD (LINE BREAK) - START WINDING HEATER - CRANKCASE HEATER.

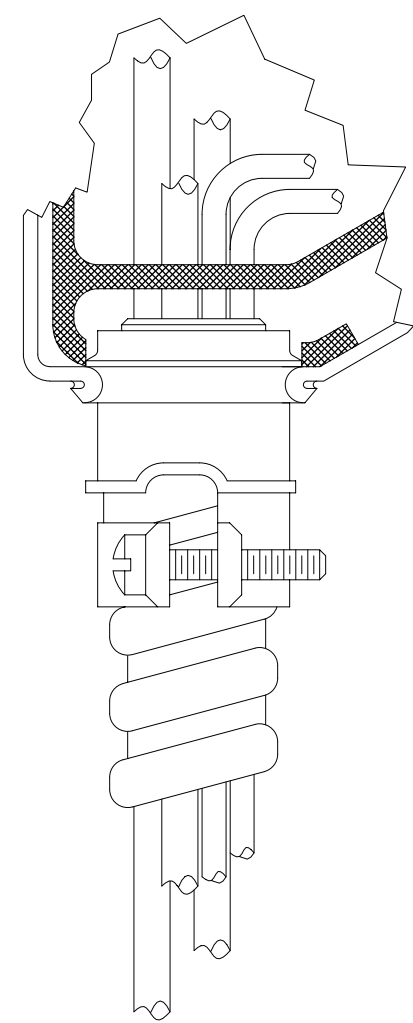

ALTERNATE IF CONDUIT
IS USED.

PSC SHOWN

- CONNECT TO LINE
SIDE OF CONTACTOR

- 230 VOLT CRANKCASE HEATER

NOTE :

1. ASSEMBLE PARTS AS SHOWN IF SPECIFIED ON B/M.
2. IF TWO RUN CAPACITORS ARE REQUIRED HOOK-UP AS SHOWN.

AV-230 V. -PSC-INTERNAL OVERLOAD (LINE BREAK) - START WINDING HEATER -
CRANKCASE HEATER.
AV-230 V. -CSR OR CSR START CAPACITOR ASSIST-INTERNAL OVERLOAD (LINE BREAK)
START WINDING HEATER - CRANKCASE HEATER.

© AIR CONDITIONING MODELS

AV

[illegible]