


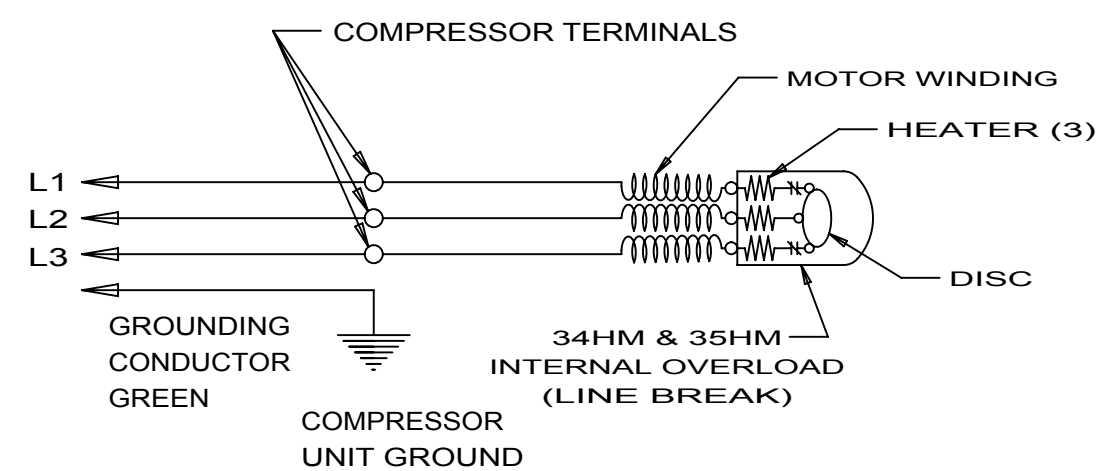
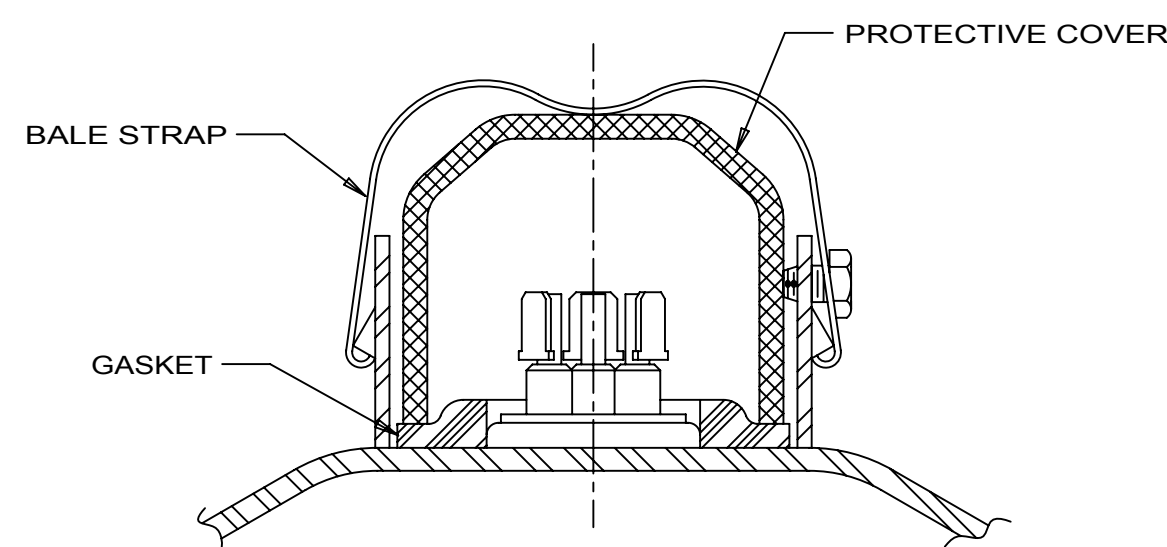
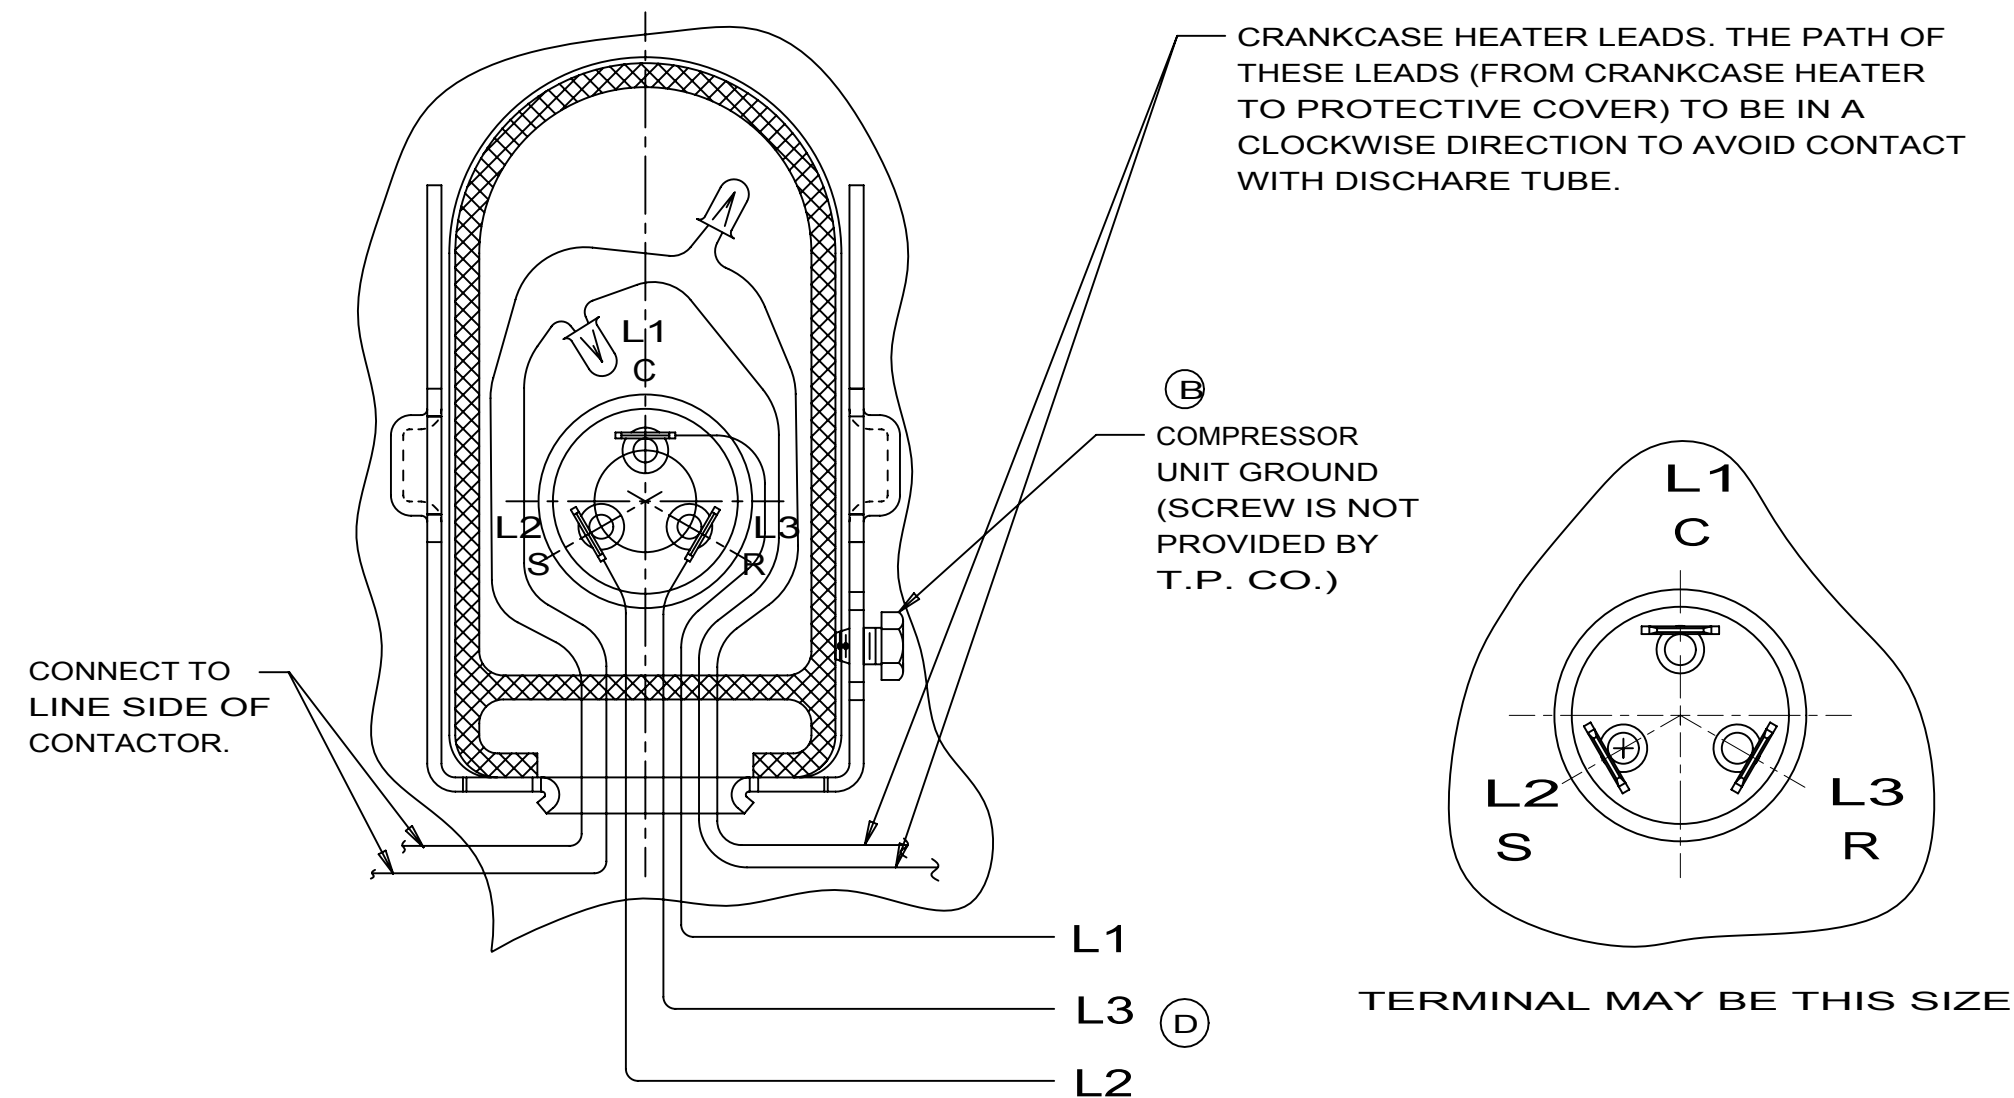


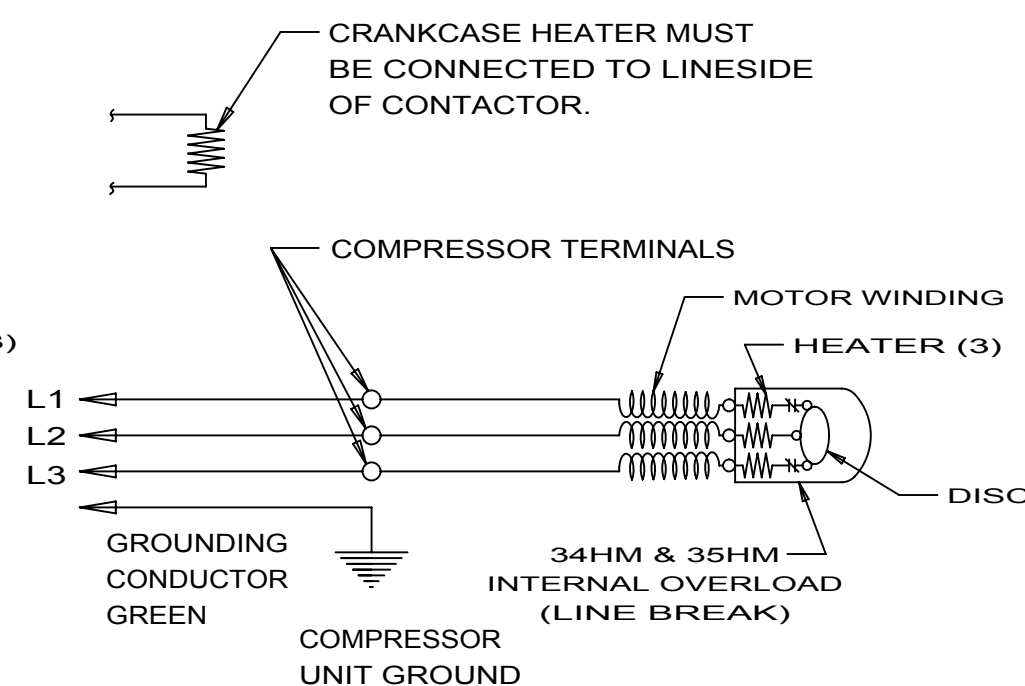


SCHEMATIC WIRING DIAGRAM - 3 PHASE
INTERNAL OVERLOAD (LINE BREAK)
REF DWG MD472-24

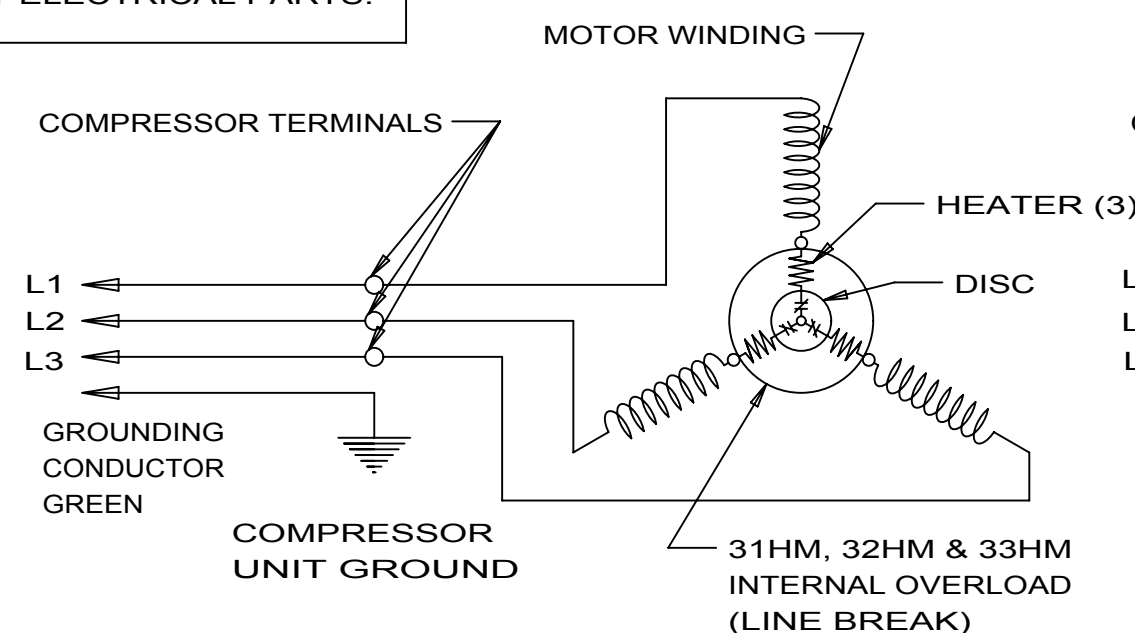

SCHEMATIC WIRING DIAGRAM - 3 PHASE
INTERNAL OVERLOAD AND (LINE BREAK)
REF DWG MD472-43

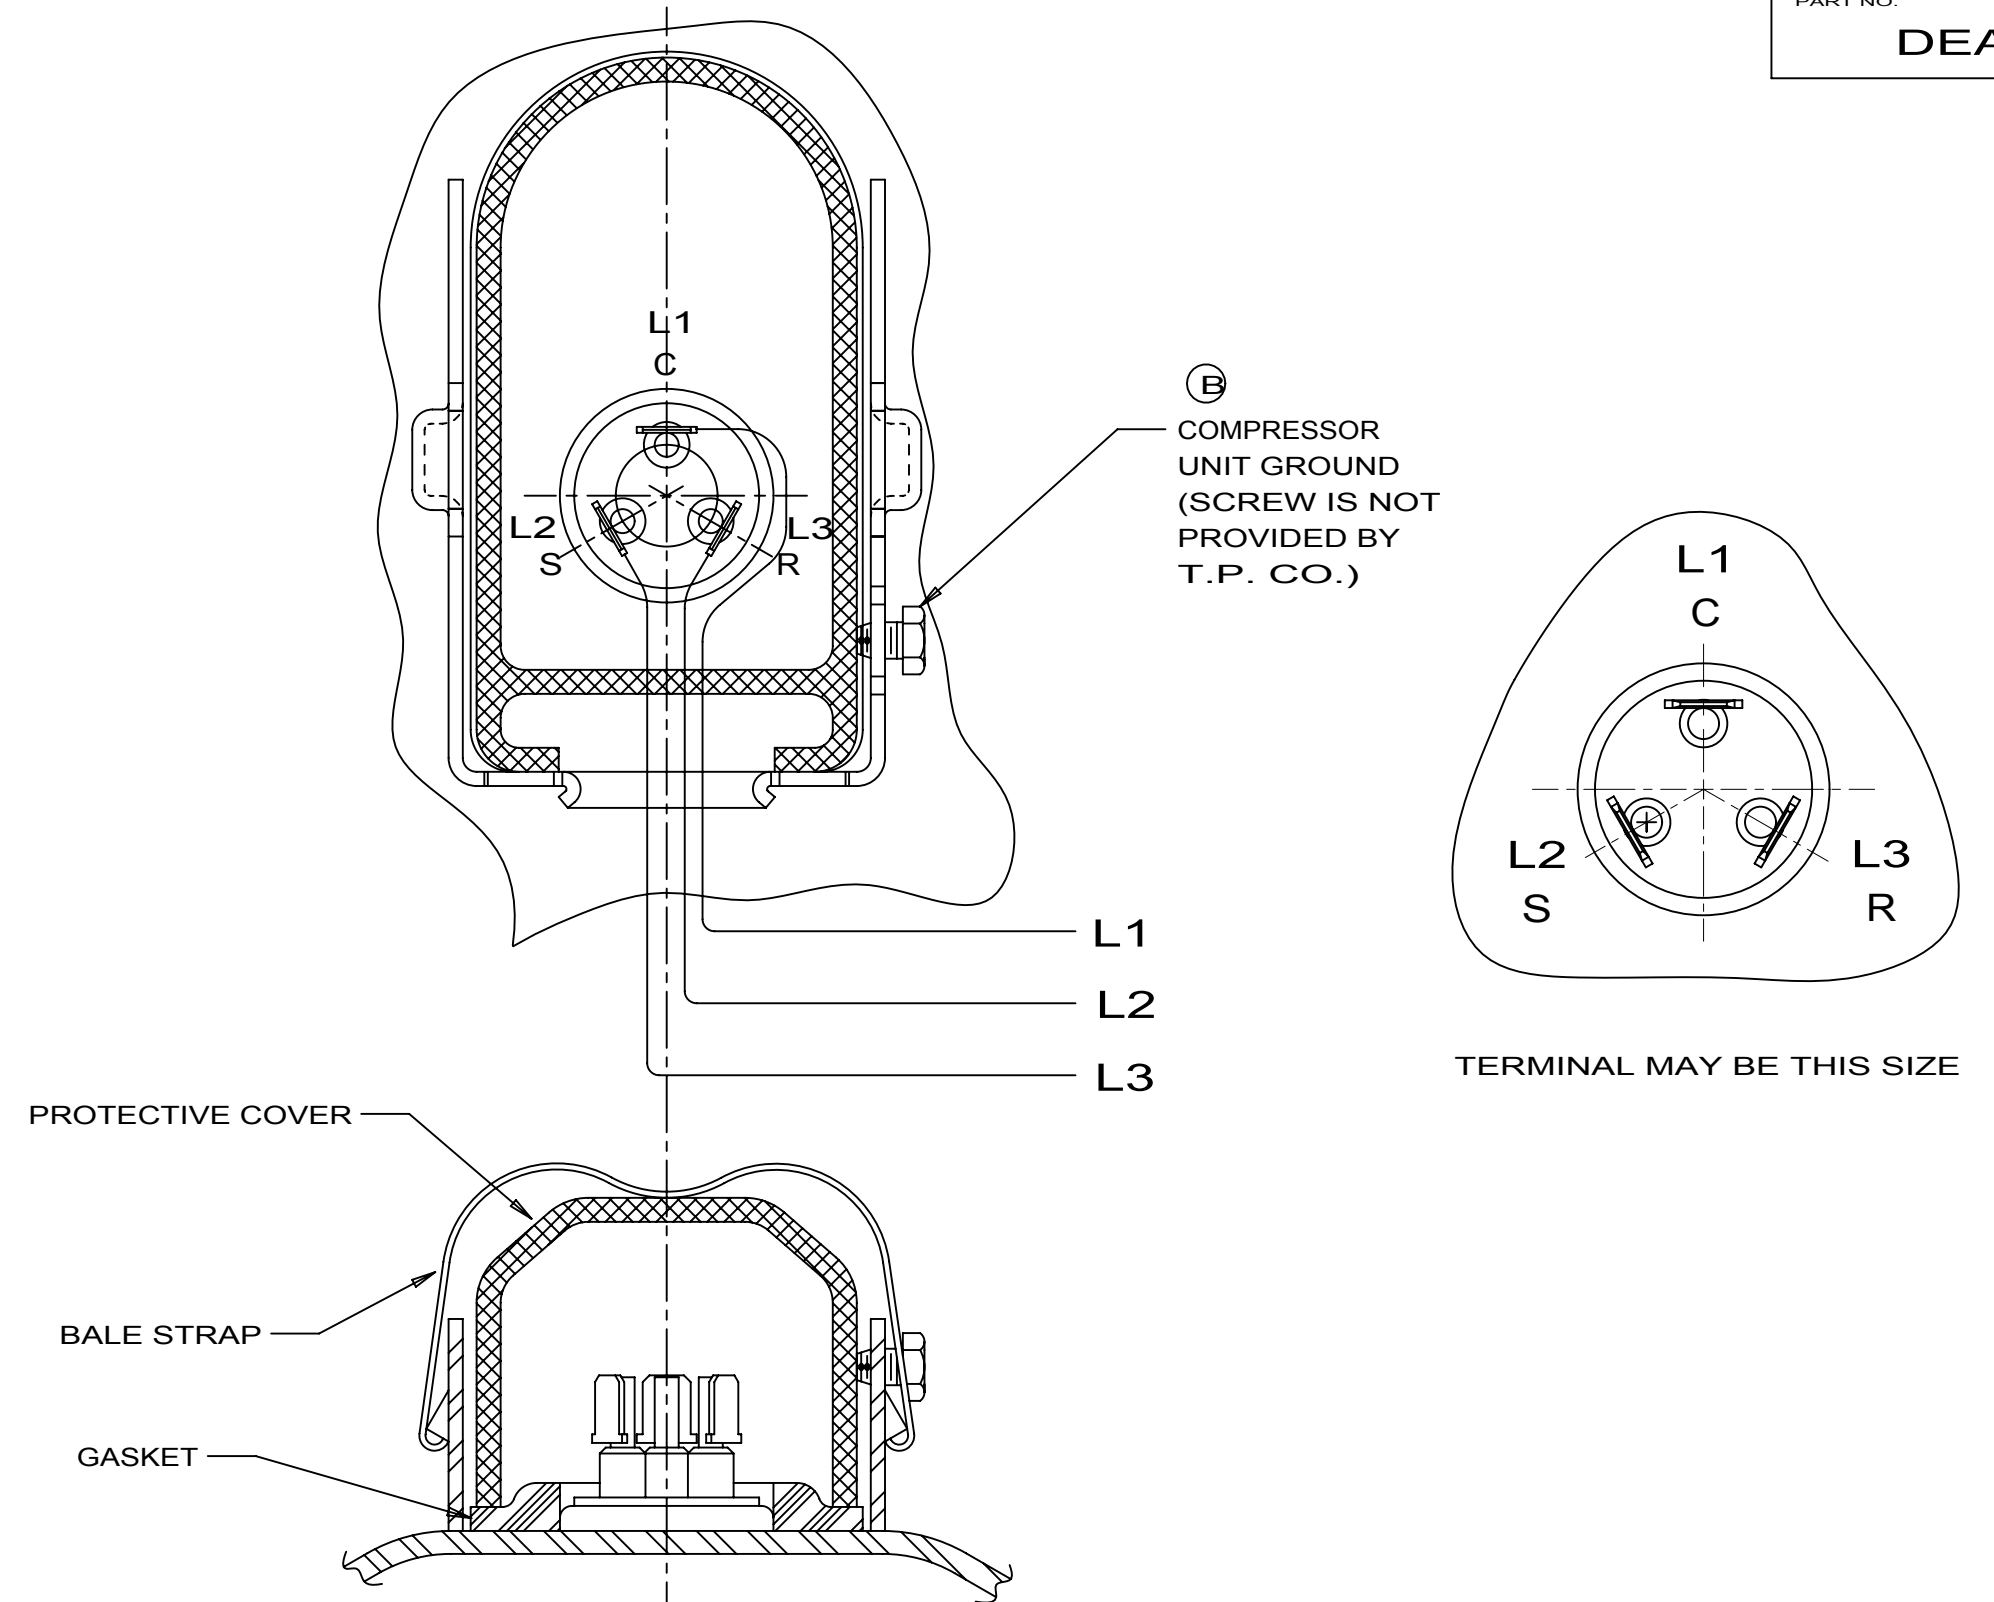

SCHEMATIC WIRING DIAGRAM - 3 PHASE
INTERNAL OVERLOAD (LINE BREAK)
REF DWG MD472-24

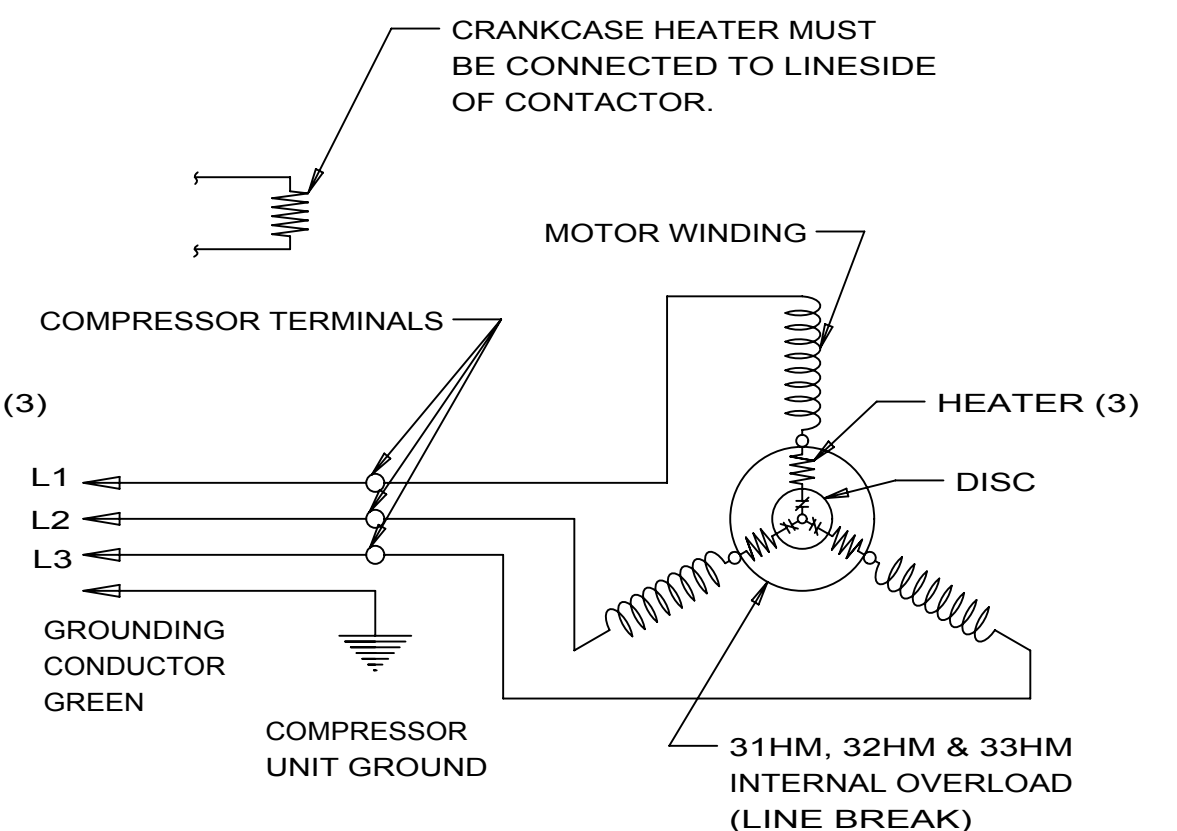

SCHEMATIC WIRING DIAGRAM - 3 PHASE
INTERNAL OVERLOAD (LINE BREAK) AND
CRANKCASE HEATER. REF DWG MD472-43

WARNING - WIRING DIAGRAM MUST BE FOLLOWED
AS SHOWN. ANY MISWIRING CAN CAUSE SERIOUS
ELECTRICAL HAZARD AND POTENTIAL DAMAGE
OR RUPTURE OF COMPONENT ELECTRICAL PARTS.

AW - 3 PHASE - INTERNAL OVERLOAD (LINE BREAK) - CRANKCASE HATER.
AW - 3 PHASE - INTERNAL OVERLOAD (LINE BREAK).

[illegible]