


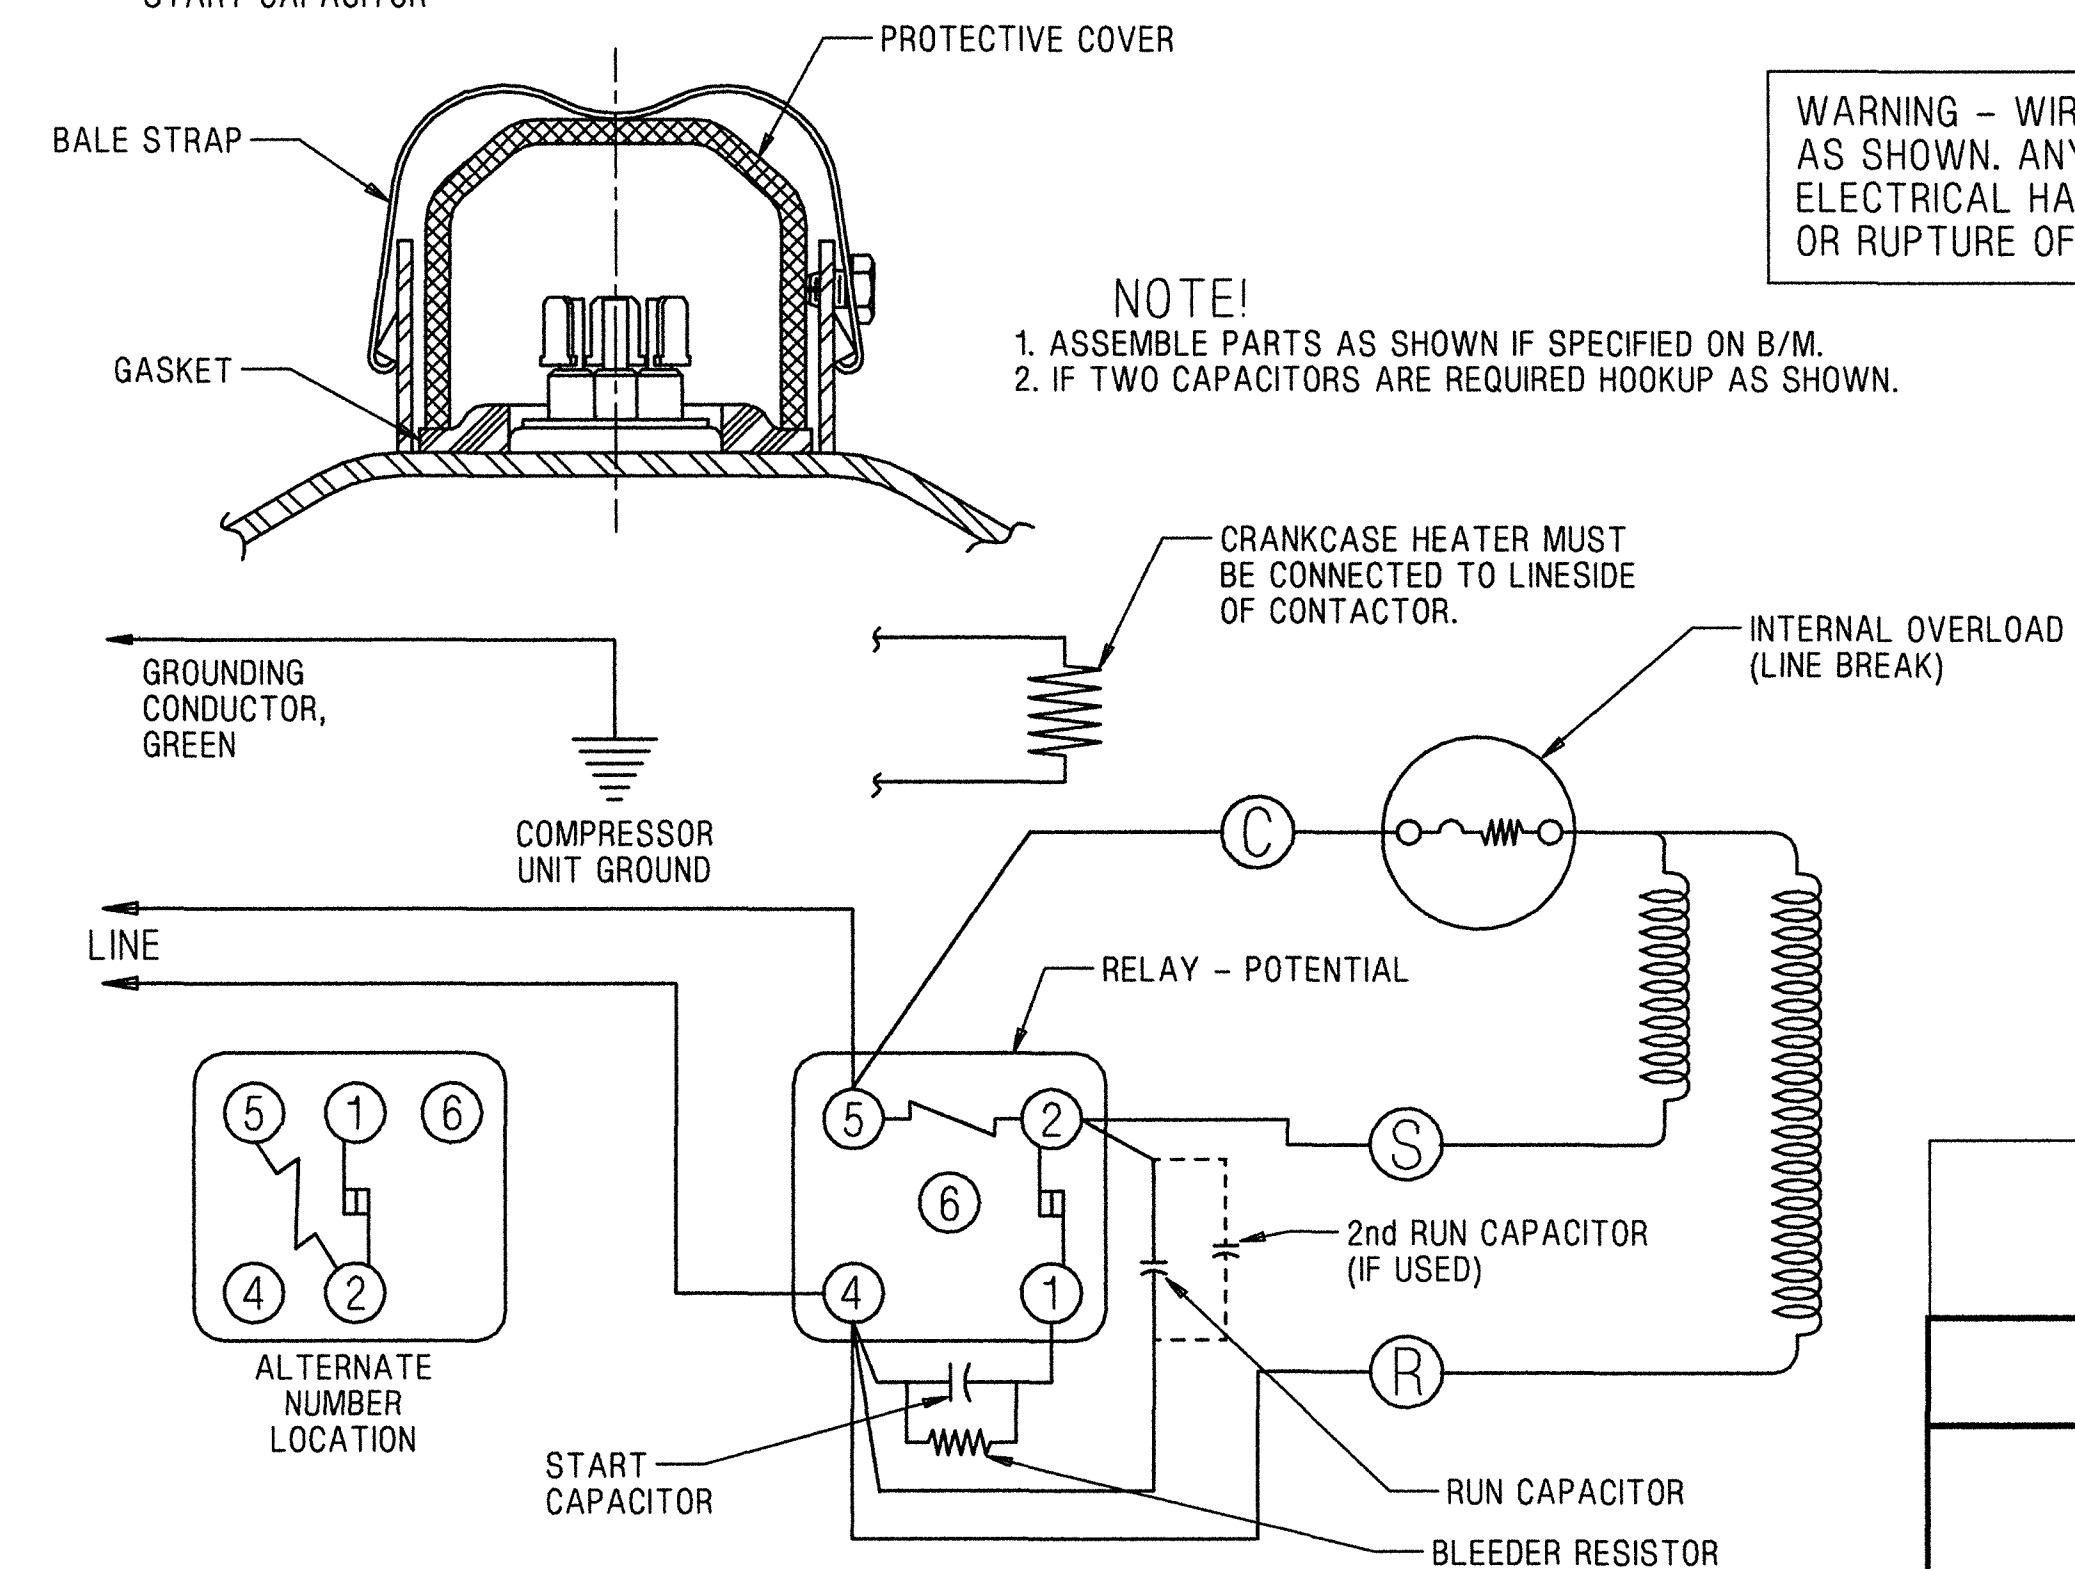


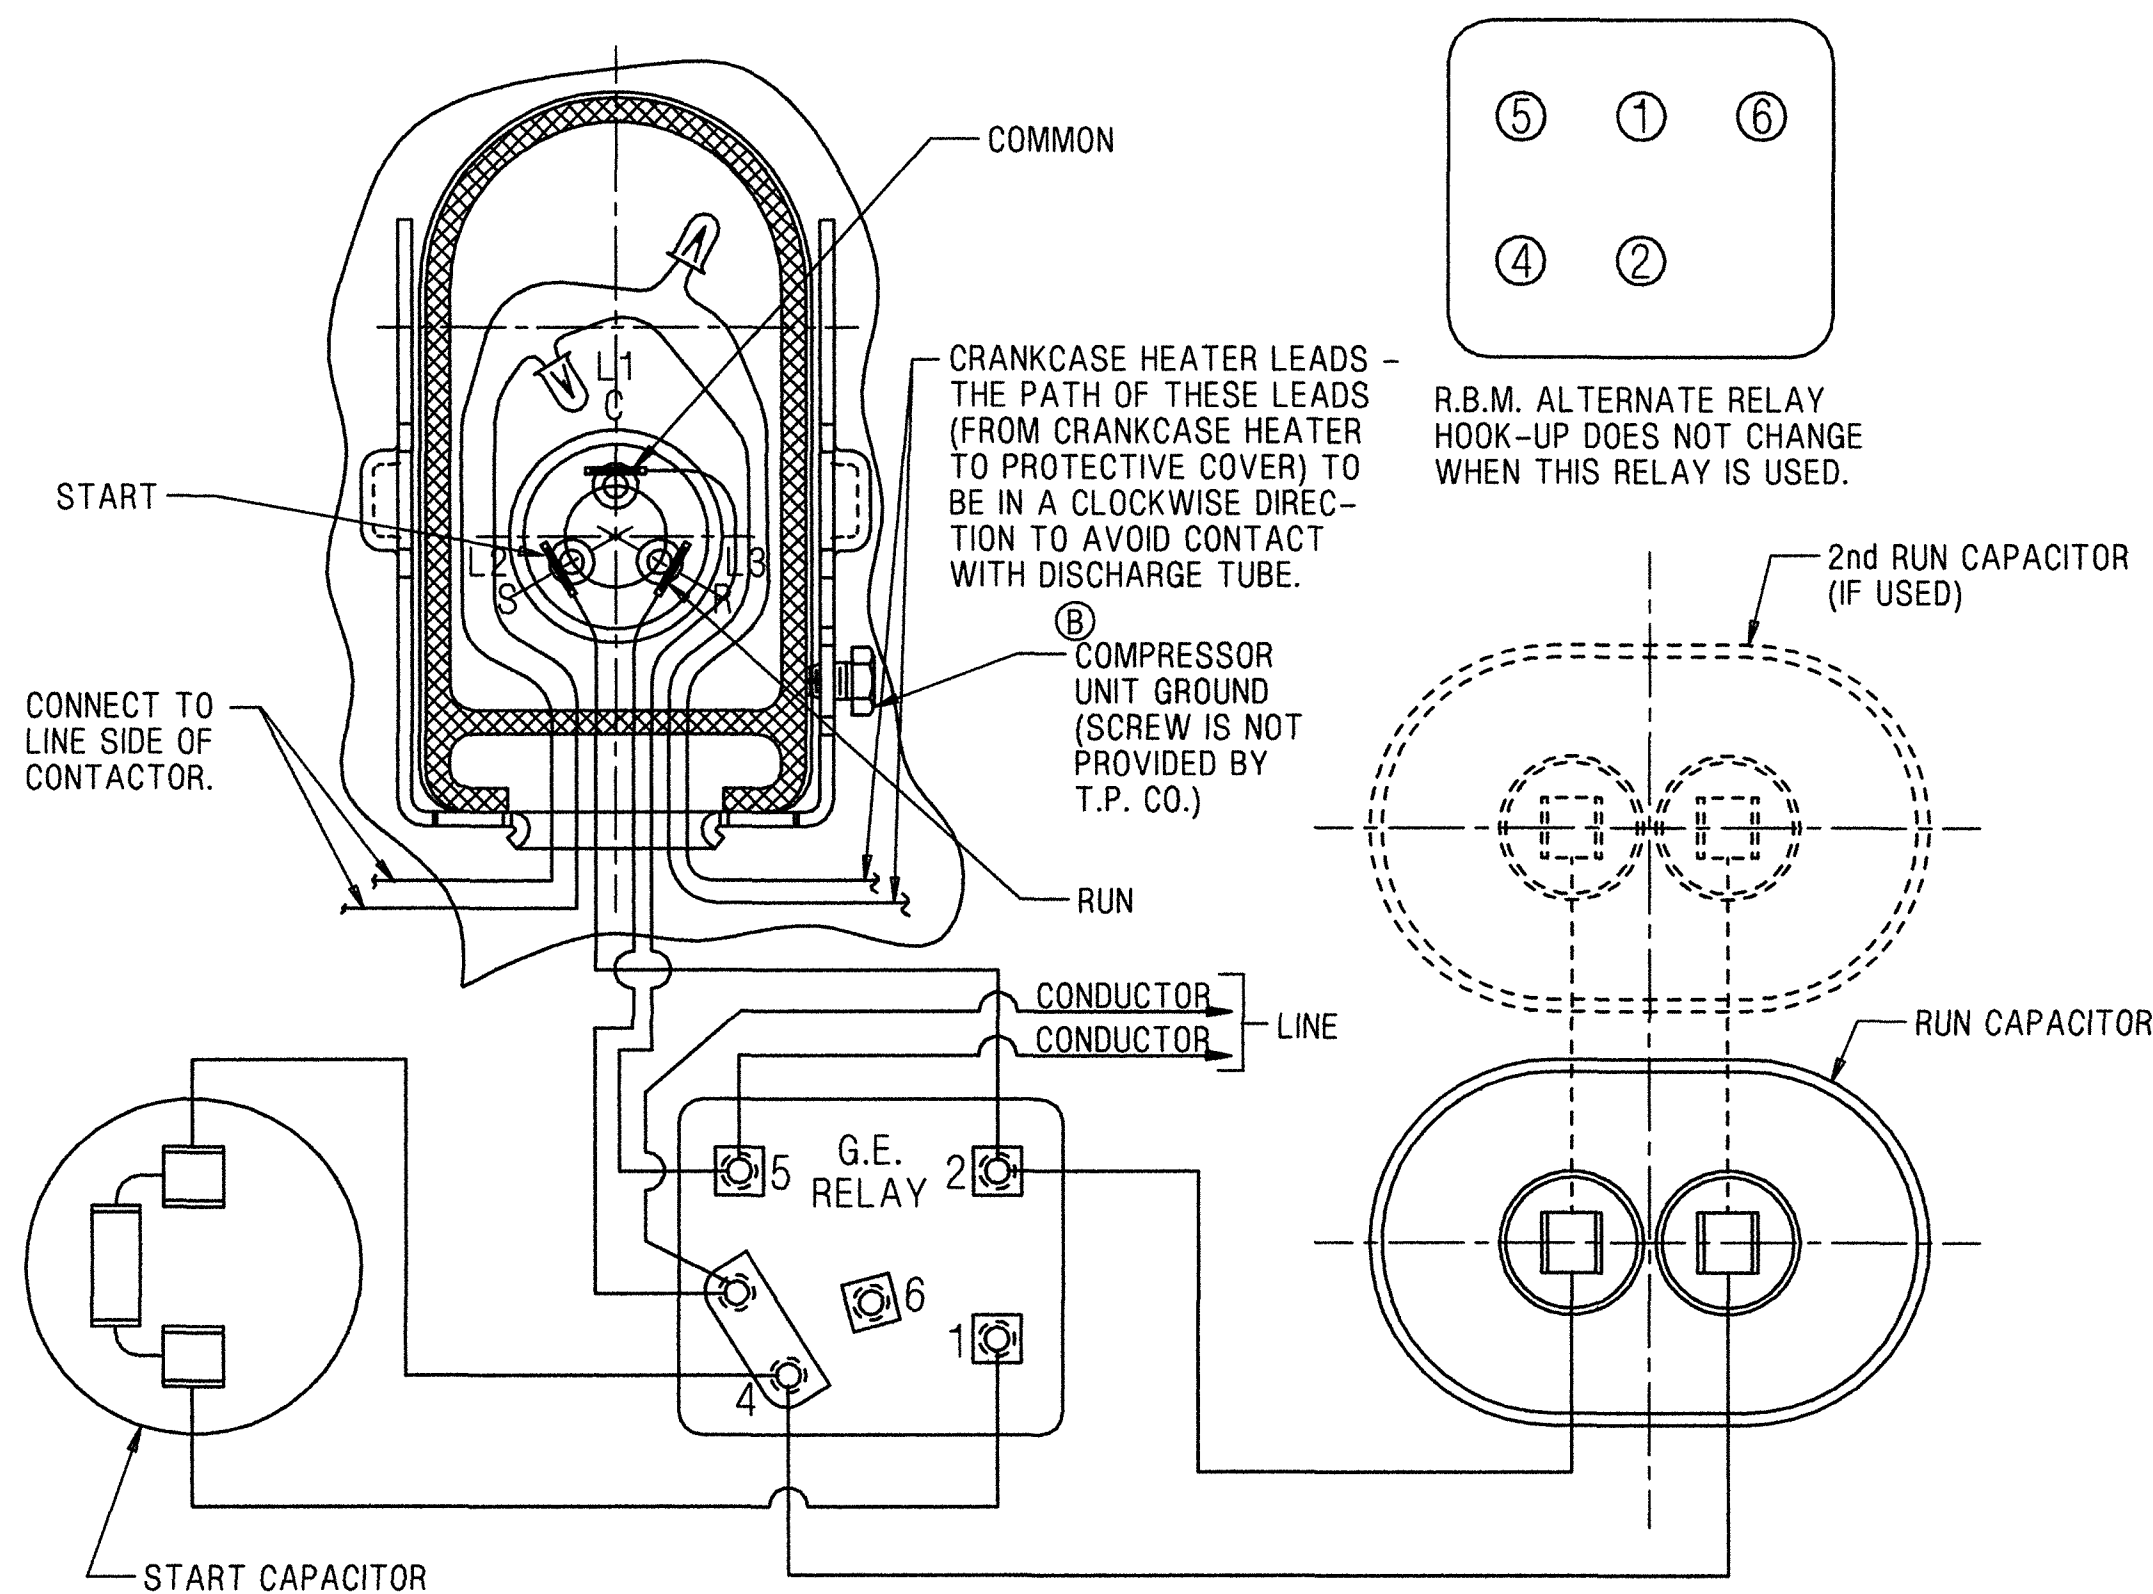

230 VOLT - SCHEMATIC WIRING DIAGRAM - CSR OR CSR START CAPACITOR ASSIST
INTERNAL OVERLOAD (LINE BREAK) - CRANKCASE HEATER REF. DWG. MD472-66

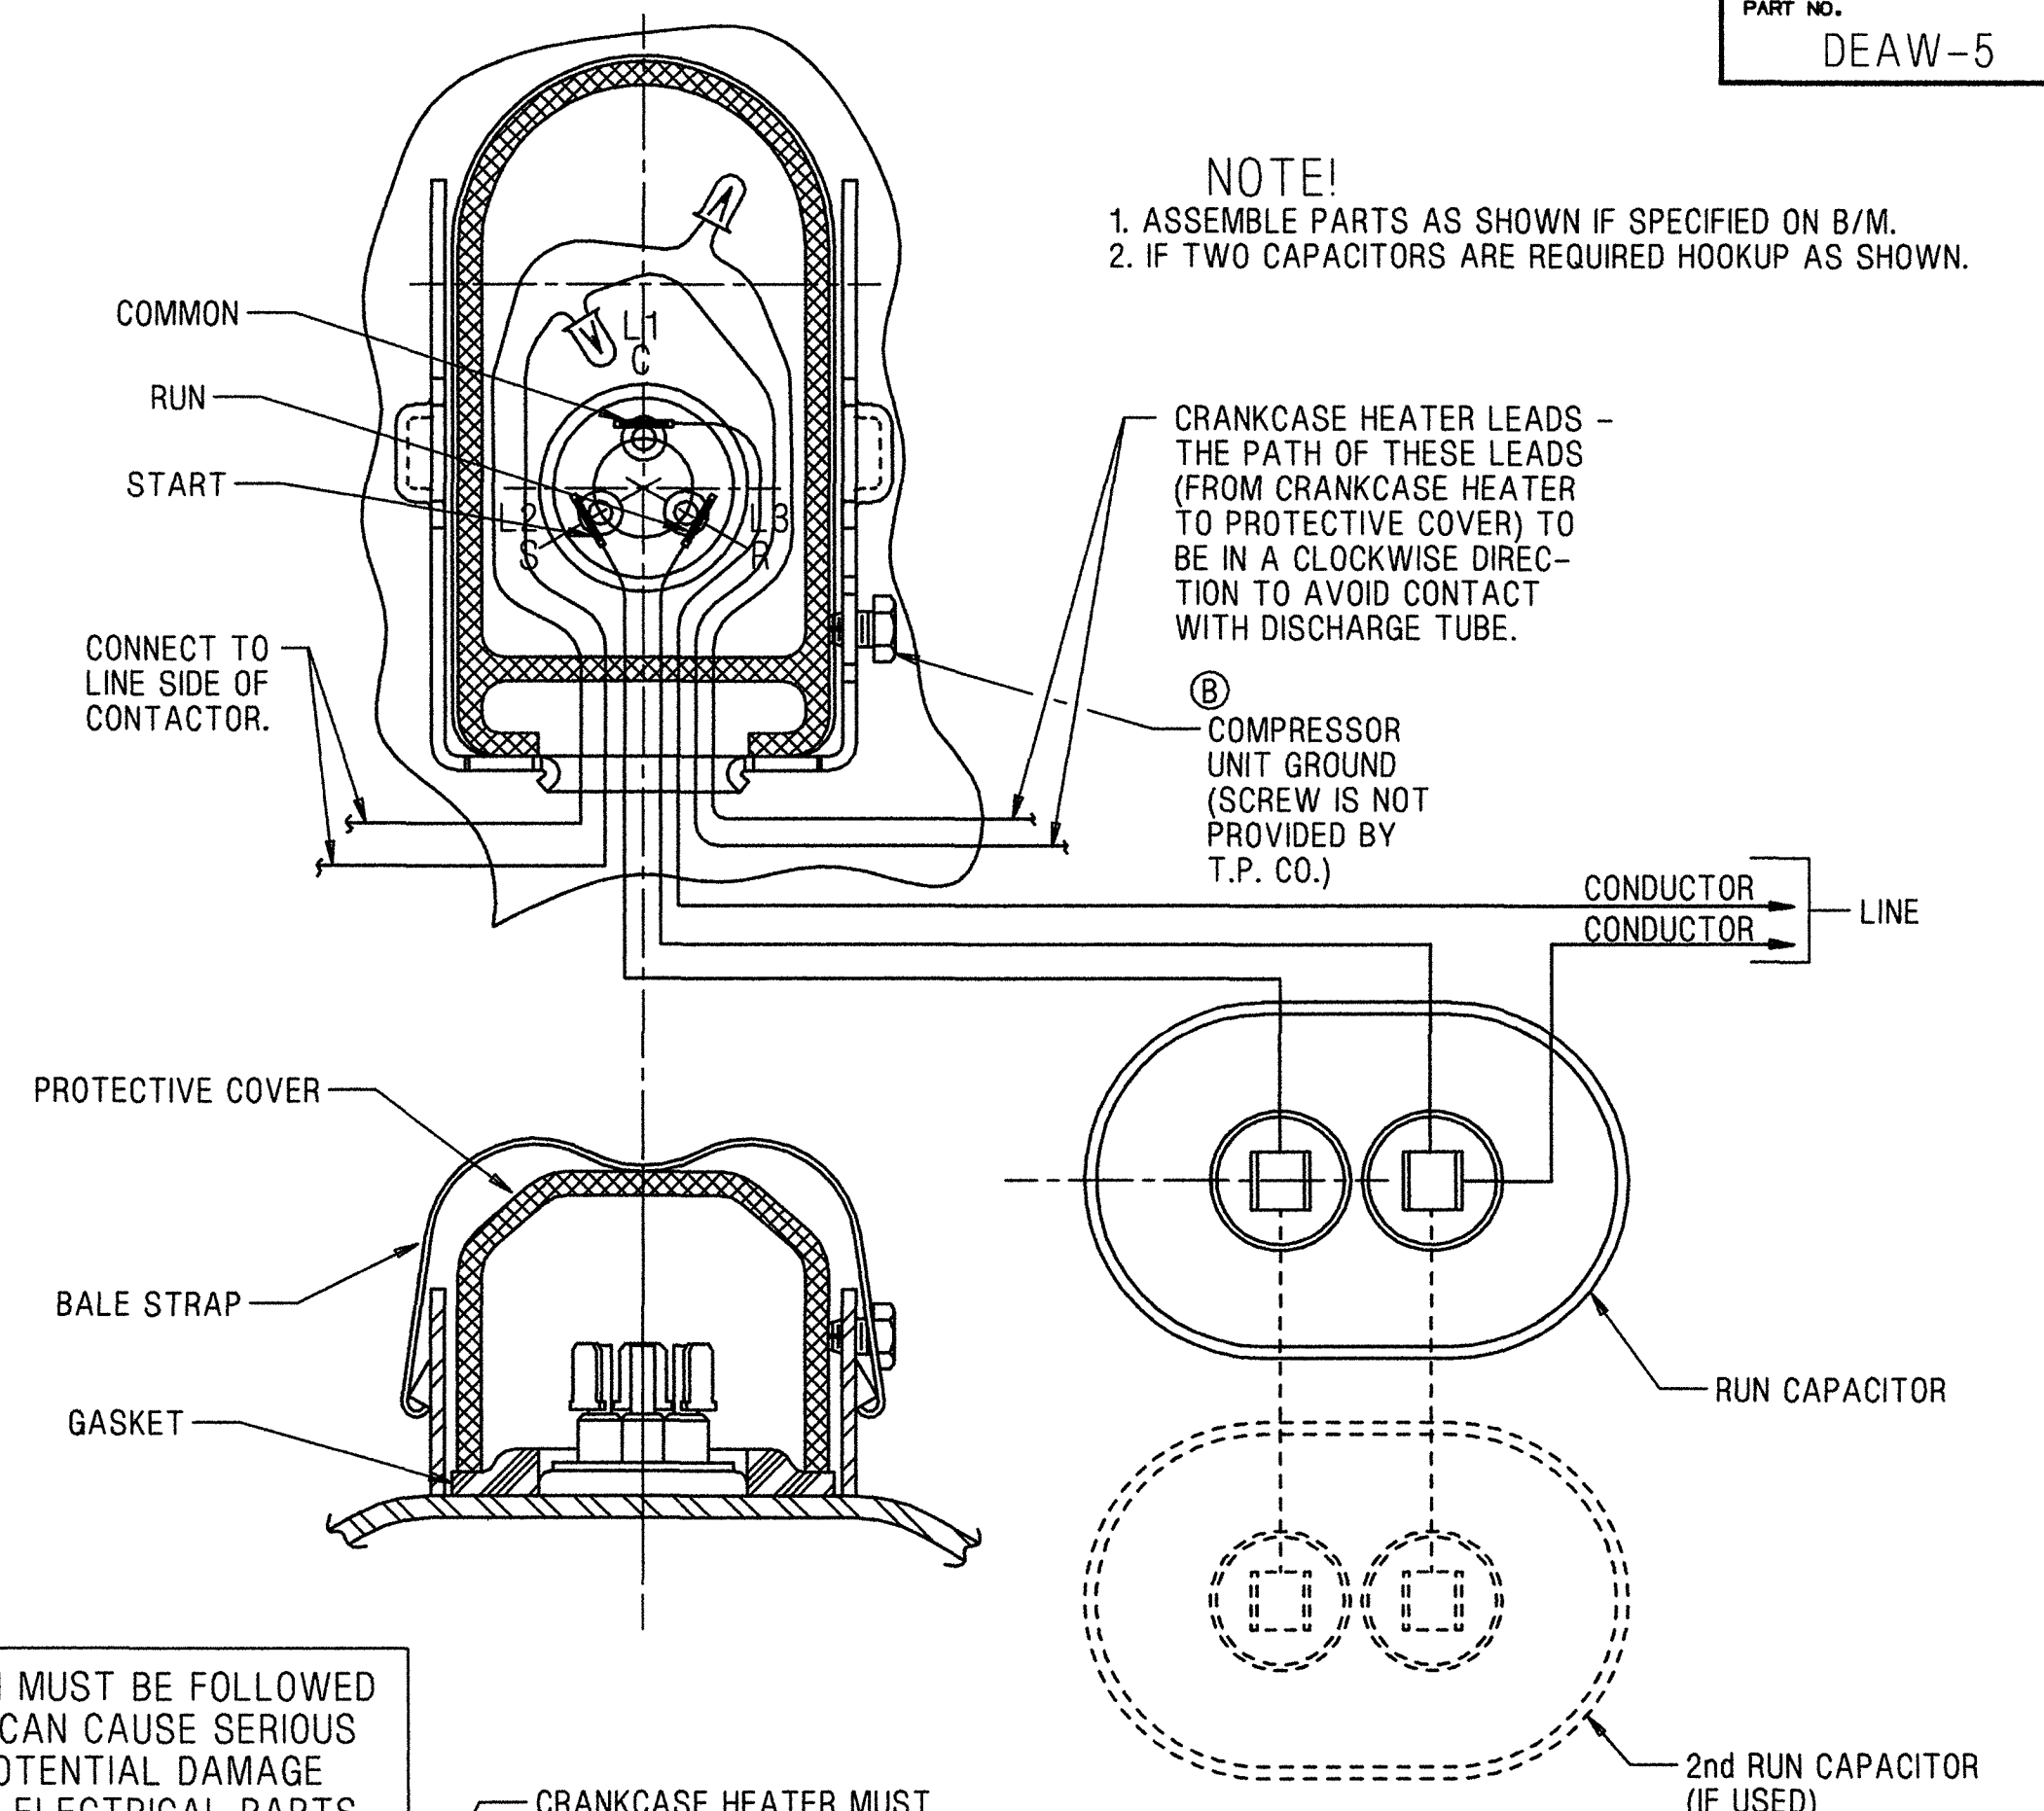

WARNING – WIRING DIAGRAM MUST BE FOLLOWED AS SHOWN. ANY MISWIRING CAN CAUSE SERIOUS ELECTRICAL HAZARD AND POTENTIAL DAMAGE OR RUPTURE OF COMPONENT ELECTRICAL PARTS.

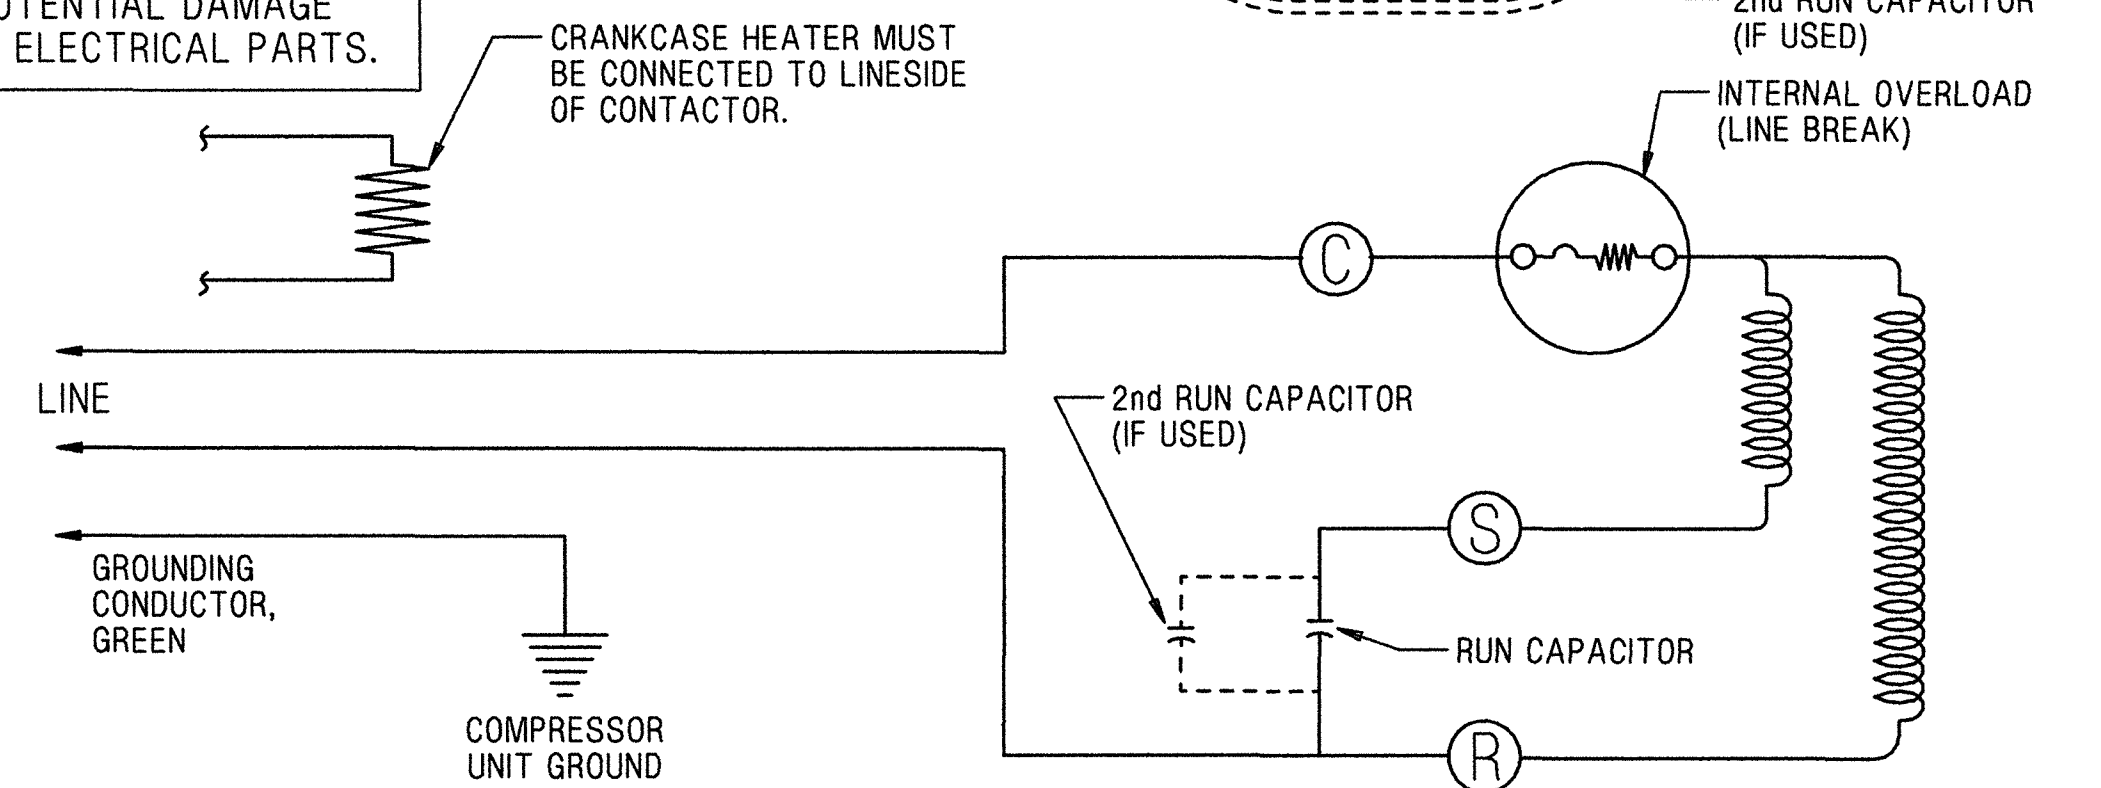

230 VOLT - SCHEMATIC WIRING DIAGRAM - PSC - INTERNAL OVERLOAD (LINE BREAK) -
CRANKCASE HEATER. REF. DWG. MD472-65

AW - 230V - PSC - INTERNAL OVERLOAD (LINE BREAK) - CRANKCASE HEATER
AW - 230V - CSR OR CSR START CAPACITOR ASSIST - INTERNAL OVERLOAD (LINE BREAK) -
CRANKCASE HEATER

[illegible]